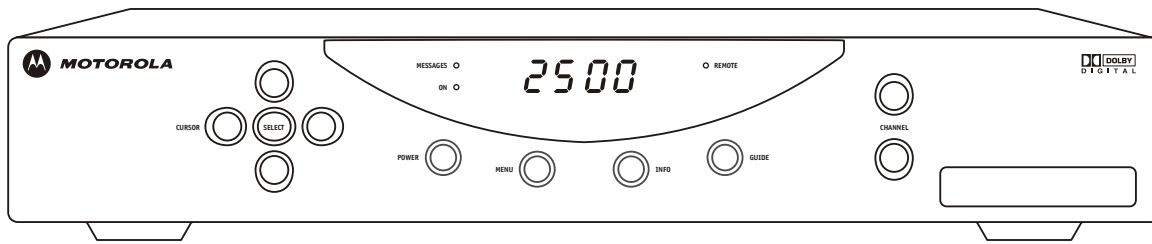



# Installation Manual

## DCT2500 Digital Consumer Terminal




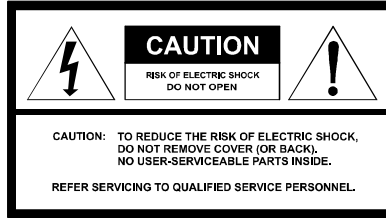**MOTOROLA**  
intelligence everywhere™





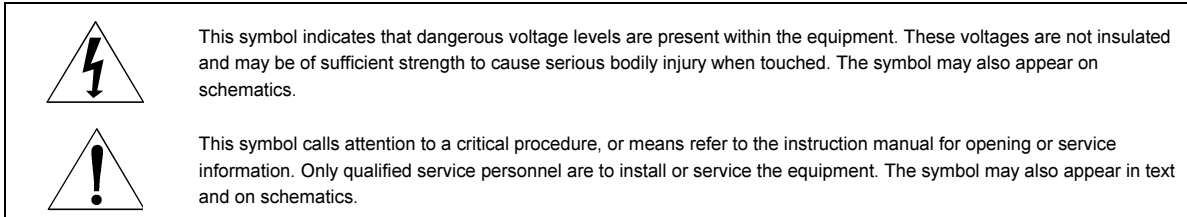Graphical symbols and supplement warning marking locations on the bottom of the appliance.



**WARNING:**

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION:**

**TO PREVENT ELECTRICAL SHOCK, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

**FCC Compliance:** Federal Communications Commission Radio and Television Interface Statement for a Class 'B' Device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in the residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Increase the separation between the equipment and the affected receiver
- Connect the equipment on a circuit different from the one the receiver is on
- Ensure that the cover plate for the security card is secured and tight

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Declaration of Conformity:** According to 47 CFR, Parts 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers, Motorola, Inc., 6450 Sequence Drive, San Diego, CA 92121, 1-800-225-9446, declares under sole responsibility that the product identifies with 47 CFR Part 2 and 15 of the FCC Rules as a Class B digital device. Each product marketed is identical to the representative unit tested and founded to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47 CFR 2.909. Operation is subject to the following condition: This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsible for ensuring that the equipment complies with the standards of 47 CFR, Paragraphs 15.107 to 15.109

**FCC Part 68 Statement:** This equipment complies with part 68 of the FCC rules. On the rear panel of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for the equipment. If requested, this information must be provided to the telephone company.

The REN is used to determine the quantity of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

This equipment uses the following USOC jack: RJC. An FCC-compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant. This equipment cannot be used on telephone company-provided coin services. Connection to Party Line Service is subject to state tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that the temporary discontinuance of services may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order to maintain uninterrupted service.

If the trouble is causing harm to the telephone system, the telephone company may request that you remove the equipment from the network until the problem is resolved.

It is recommended that the customer install an AC surge arrestor in the AC outlet to which this device is connected. This is to avoid damaging the equipment by local lightning strikes and other electrical surges.

**Canadian Compliance:** This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

**Industry Canada CS-03 Statement:** The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The department does not guarantee that the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions might not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Repairs or alterations made by the user to this equipment, or equipment malfunctions may give the telecommunication company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Ringer Equivalence Number (REN) of this device is 0.4. The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all devices does not exceed 5. The telephone connection arrangement is a CA11A.

**Repairs:** If repair is necessary, call the Motorola Repair Facility at 1-800-227-0450 for a Return for Service Authorization (RSA) number before sending the unit. The RSA number must be prominently displayed on all equipment cartons. Pack the unit securely; enclose a note describing the exact problem, and a copy of the invoice that verifies the warranty status. Ship the unit PRE-PAID to the following address:

Motorola, Inc.  
Attn: RSA # \_\_\_\_\_  
c/o Rudolph Miles and Sons  
2500 Courage Boulevard  
Brownsville, TX 78521

**NOTE TO CATV SYSTEM INSTALLER:** This reminder is provided to call CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close as possible to the point of cable entry as practical.

Copyright © 2003 by Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

---

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. STARVUE and STARFONE are registered trademarks of Motorola, Inc. Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are registered trademarks of Dolby Laboratories. All other product or service names are the property of their respective owners.

# Contents

---

## Section 1

### Introduction

Features, Options, and Interfaces .....	1-1
Using This Manual .....	1-2
Related Documentation .....	1-2
Document Conventions .....	1-3
If You Need Help .....	1-3
Calling for Repairs .....	1-3

## Section 2

### Overview

Front Panel .....	2-1
Rear Panel.....	2-2
Options .....	2-4
Audio Output Modes.....	2-5

## Section 3

### Installation

Before You Begin.....	3-1
Installing the DCT2500.....	3-1
Standard Cabling Diagram .....	3-2
Standard VCR Cabling Diagram .....	3-3
VCR Cabling With RF Bypass Switch Diagram .....	3-4
A/B In Module Cabling Diagrams .....	3-5
Composite Baseband and S-Video Cabling Diagrams.....	3-7
Stereo Cabling Diagram (Baseband).....	3-9
Home Theater Receiver Cabling Diagram .....	3-11
Operational Check .....	3-13

## Section 4

### Adding the IR Blaster Option

Locating the IR Receiver on the VCR.....	4-1
Installing the IR Blaster .....	4-2
Checking the Installation.....	4-2

## Section 5 Troubleshooting

### Appendix A Diagnostics

Using Diagnostics .....	A-2
d 01: General Status .....	A-3
Error Codes .....	A-5
V860DLd 02: Out-of-Band (OOB) Diagnostic .....	A-6
Selecting the OOB Frequency .....	A-7
d 03: In-band Status .....	A-8
d 04: Audio/Video Status .....	A-9
d 05: Unit Address .....	A-10
d 06: Firmware Version .....	A-11
d 07: Current Channel Status .....	A-11
d 08: Renewable Security .....	A-13
d 09: Upstream Diagnostics .....	A-14
RF Return (STARVUE II) Diagnostics .....	A-14
Telephone Modem (STARFONE) Diagnostics .....	A-15
d 10: Application (APP) Code Modules .....	A-17
d 11: Memory Status .....	A-18
d 12: Interactive Info .....	A-18
d 13: MAC Frequency Table .....	A-19
d 14: Control Channels .....	A-20
d 15: Message Types .....	A-20
d 16: In-band Program Association Table (PAT) .....	A-20
d 17: In-band Program Map Table (PMT) .....	A-20
d 18: Task Status .....	A-21
d 19: USB Diagnostics .....	A-21
d 20: In-band Multicast Address Filter .....	A-22
d 21: Keyboard / LED Diagnostics .....	A-22

## Abbreviations and Acronyms

## Figures

Figure 1-1 Front and rear views.....	1-2
Figure 2-1 Front panel .....	2-1
Figure 2-2 Rear panel.....	2-2
Figure 2-3 Options available for the DCT2500.....	2-4
Figure 3-1 Standard cabling to a TV using RF connectors .....	3-2
Figure 3-2 Standard VCR cabling .....	3-3
Figure 3-3 Cabling with the RF Bypass module (using RF return) .....	3-4
Figure 3-4 A/B In module on a DCT2500 using optional telco return .....	3-5
Figure 3-5 A/B In module on a DCT2500 with the return on Cable A.....	3-5
Figure 3-6 A/B In module on a DCT2500 with return on Cable B .....	3-6
Figure 3-7 Standard baseband audio and video outputs .....	3-7
Figure 3-8 Composite VCR cabling .....	3-8
Figure 3-9 Connecting the DCT2500 to a stereo using the audio connectors on the VCR .....	3-9
Figure 3-10 Audio on VCR/audio output on TV .....	3-10
Figure 3-11 Connections to a home theater receiver using DIGITAL AUDIO COAX.....	3-11
Figure 3-12 Connections to a home theater receiver using DIGITAL AUDIO OPTICAL.....	3-12
Figure 4-1 IR transmitter installed in mounting bracket .....	4-1
Figure 4-2 IR Blaster installed .....	4-2

## Tables

Table 2-1 Front panel controls and LEDs.....	2-1
Table 2-2 Rear panel features.....	2-2
Table 2-3 Options.....	2-4
Table 3-1 Operational check procedures .....	3-13
Table 5-1 Troubleshooting guidelines.....	5-1

## Section 1

# Introduction

---

This manual provides instructions to install the Motorola DCT2500 analog/digital set-top terminal. The DCT2500:

- Supports 64 and 256 QAM digital signal formats
- Is compatible with existing Motorola analog and digital set-tops, which are not affected by the new data the addressable controller sends to the DCT2500s
- Uses digital compression technology to provide new revenue generating services
- Can be configured to support real time reverse path communications, enabling interactive services such as Video on Demand (VOD), Internet access, e-mail, and home shopping

## Features, Options, and Interfaces

The Motorola DCT2500 offers the following standard features:


- 54 to 860 MHz integrated tuner
- Integrated RF return (using built-in STARVUE II module)
- RF and baseband audio/ video ports
- IR Blaster port
- Switched accessory outlet
- RS 232 serial data port (provides a high speed serial data interface)
- Coaxial digital audio output

Optional features include:

- Expanded memory
- STARFONE® II (14.4 kbps) Telco return
- A/B In switch
- RF Bypass switch
- IR Blaster cable
- S-Video output
- Toslink optical digital audio output
- USB port
- Analog descrambling

Figure 1-1 illustrates front and rear views of the DCT2500:

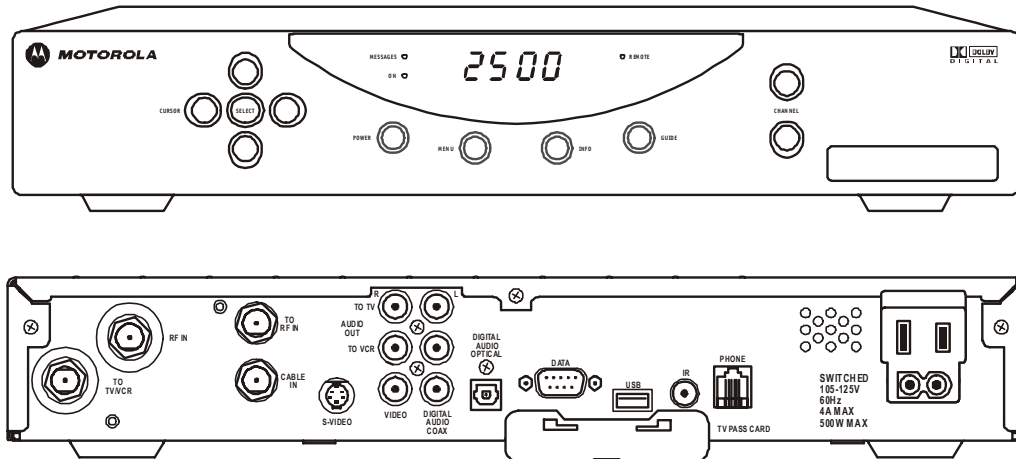**Figure 1-1**  
Front and rear views



## Using This Manual

This manual provides instructions to install and configure a DCT2500:

- Section 1**      **Introduction** provides a product description, a list of related documentation, the technical helpline telephone number, and the repair/return procedure.
- Section 2**      **Overview** describes the DCT2500 and provides an overview of its use. This section also identifies the front-panel displays and switches and describes the rear-panel features.
- Section 3**      **Installation** provides instructions on how to install the DCT2500 in a subscriber location and perform operational tests.
- Section 4**      **Adding the IR Blaster Option** provides instructions on how to install the IR Blaster option for controlling VCR recording through the DCT2500.
- Section 5**      **Troubleshooting** provides guidelines for troubleshooting the equipment.
- Appendix A**    **Specifications** provide the technical specifications for the DCT2500.
- Appendix B**    **Diagnostics** provide instructions on accessing and interpreting the built-in diagnostics.
- Abbreviations and Acronyms**    The **Abbreviations and Acronyms** list contains the full spelling of the short forms used in this manual.

## Related Documentation

Separate instruction manuals are available for associated components. Although the *DCT2500 User Guide* may be useful, it is not necessary to install or operate the basic DCT2500 if you have this manual.



## Document Conventions

Before you begin working with this manual and using the DCT2500, familiarize yourself with the stylistic conventions used in this manual:

<b>SMALL CAPS</b>	Denotes silk screening on the equipment, typically representing front- and rear-panel controls, input/output (I/O) connections, and LEDs
<b>* (asterisk)</b>	Indicates that several versions of the same model number exist and the information applies to all models; when the information applies to a specific model, the complete model number is given
<b><i>Italic type</i></b>	Used for emphasis
<b>Courier font</b>	Displayed text

## If You Need Help

If you need assistance while working with the DCT2500, contact the Motorola Technical Response Center (TRC):

- Inside the U.S.: **1-888-944-HELP (1-888-944-4357)**
- Outside the U.S.: **215-323-0044**
- Online: <http://broadband.motorola.com/noflash/websupport.html>.

The TRC is open from 8:00 AM to 2:00 AM Eastern Time, Monday through Friday and 10:00 AM to 5:00 PM Eastern Time, Saturday. When the TRC is closed, emergency service *only* is available on a call-back basis. Web Support offers a searchable solutions database, technical documentation, and low priority issue creation/tracking 24 hours per day, 7 days per week.

## Calling for Repairs

If repair is necessary, call the Motorola Repair Facility at **1-800-227-0450** for a Return for Service Authorization (RSA) number before sending the unit. The RSA number must be prominently displayed on all equipment cartons. The Repair Facility is open from 8:00 AM to 5:00 PM Central Time, Monday through Friday.

When calling from outside the United States, use the appropriate international access code and then dial **956-541-0600** to contact the Repair Facility.

When shipping equipment for repair, follow these steps:

- 1** Pack the unit securely.
- 2** Enclose a note describing the exact problem. Complete and enclose the checklist provided with the unit.
- 3** Enclose a copy of the invoice that verifies the warranty status.
- 4** Ship the unit **PREPAID** to the following address:

Motorola, Inc.  
c/o Rudolph Miles & Son, Inc.  
Attn: RSA # \_\_\_\_\_  
5964 E. 14<sup>th</sup> Street  
Brownsville, TX 78521


## Section 2 Overview

This section provides illustrations and tables showing the controls, displays and connectors. Before you begin to install the DCT2500, familiarize yourself with its controls and displays.






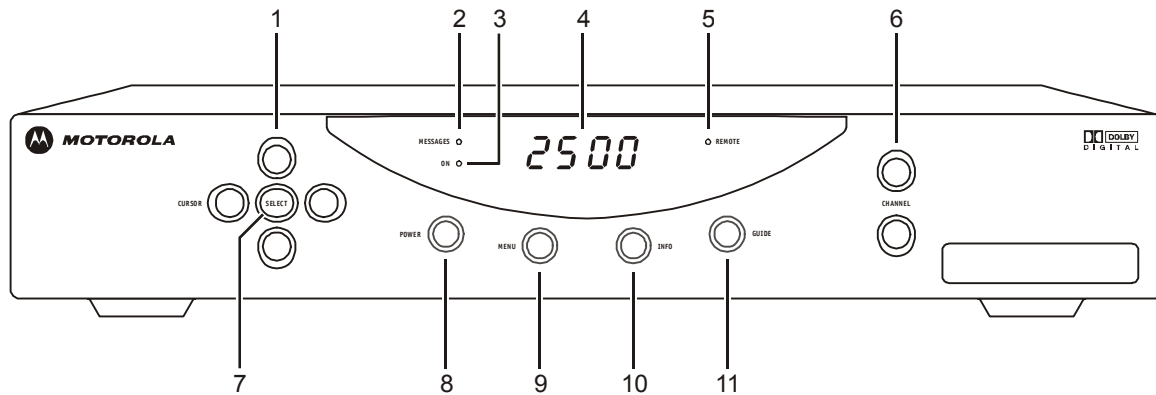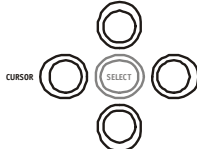
### Front Panel






The front panel contains selection keys, tuning keys, various displays, and the power switch. These controls provide minimum yet functional capability if the remote control is lost or temporarily out of service. Functions requiring a numeric entry are not available without a remote control.

**Figure 2-1**  
Front panel

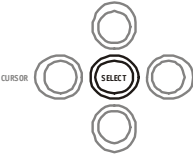

**Table 2-1**  
Front panel controls and LEDs

Key	Feature	Function
1		Moves the cursor in menus and electronic program guide (EPG) screens
2	MESSAGES 	Lights to indicate that a message is present
3	ON 	Lights when the unit is turned on
4		Displays current channel number or time of day
5	 REMOTE	Flashes when a signal is received from the remote control
6		Changes the channel up and down

Key	Feature	Function
7		Selects menu options, Pay-Per-View (PPV) events, and tunes channels from the EPG
8		Turns the DCT2500 on and off
9		Displays the main menu
10		Displays current channel and program information
11		Displays the EPG

## Rear Panel

The rear panel contains a switched power outlet and connectors for video, audio, RF cabling, data output, and the IR Blaster:

Figure 2-2  
Rear panel

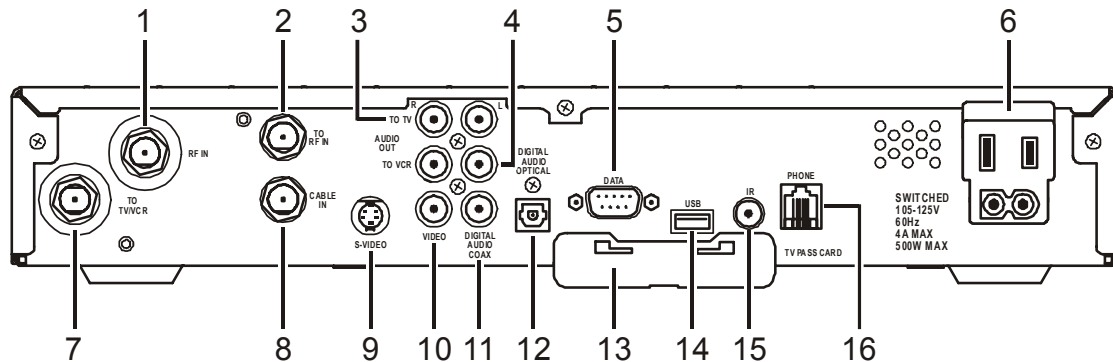


















Table 2-2  
Rear panel features


Key	Item	Function
1		A coaxial input that is connected to the TO RF IN.
2		A coaxial input that directs the cable signal to other connections on the DCT2500.

Key	Item	Function
3		Right/left RCA stereo outputs connect the DCT2500 to the TV. The audio output to the TV is volume controlled.
4		Right/left RCA stereo outputs connect the DCT2500 to the VCR. The audio output to the VCR is line level.
5		A high-speed serial interface for connecting an optional external high definition TV decoder (do not connect the PC to this interface)
6		<p>This is a two-plug AC power connector:</p> <ul style="list-style-type: none"> <li>▪ The bottom plug is an input for the AC power cord</li> <li>▪ The top plug is a switched power outlet for another device such as a TV or VCR into</li> </ul>
7		A coaxial output to connect the DCT2500 to the TV or VCR.
8		A coaxial input for the incoming signal from the wall outlet.
9		An S-Video connector for sending high quality video to external devices (high-end VCR or TV) that accept S-Video. (Optional)
10		This RCA video output connects the DCT2500 to an input on a TV, VCR, or other device.
11		A coaxial audio output to connect the DCT2500 to a digital home theater receiver or A/V receiver.
12		A Toslink connector to connect the DCT2500 to a digital home theater receiver. (Optional)
13		Reserved for future use
14		The Universal Serial Bus (USB) is used to connect to devices such as keyboards, joysticks, scanners, disk storage, PCs, printers, and digital cameras, if supported. (Optional)
15		A stereo mini-phone connector connecting the optional Infrared (IR) Blaster attachment for the DCT2500.
16		RJ-11 telephone modem output to connect to the telephone line for systems using telco-return. (Optional)

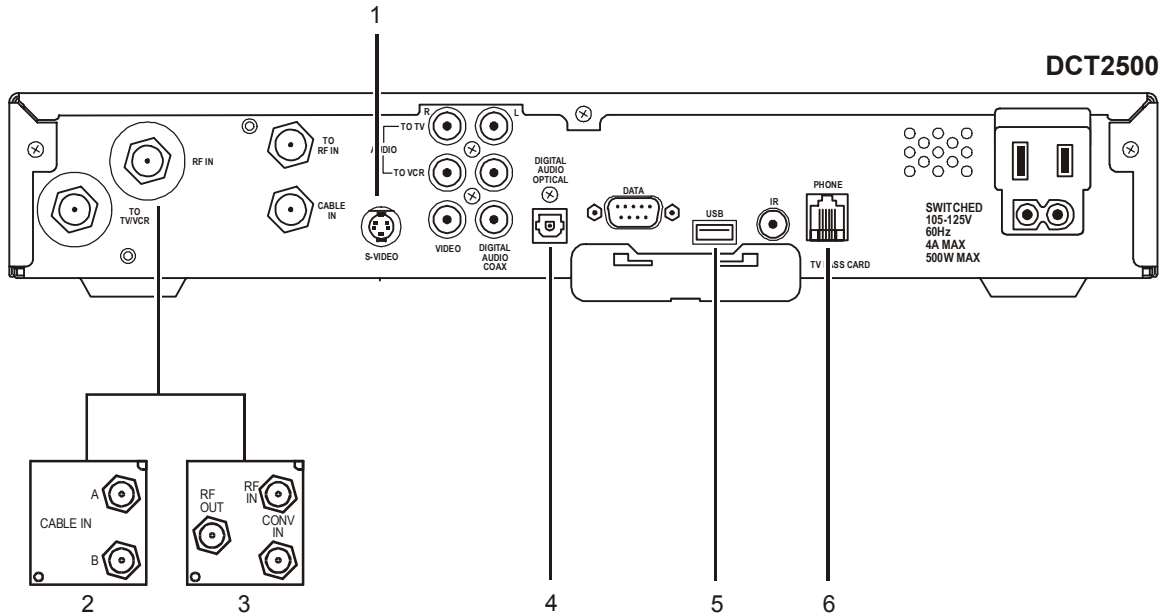




## Options

The following options enable you to meet individual subscriber needs:


**Figure 2-3**  
Options available for the DCT2500



**Table 2-3**  
Options

Key	Option	Name	Function
1		<b>S-VIDEO</b>	An S-Video connector for sending high quality video to external devices (high-end VCR or TV) that accept S-Video.
2		<b>A/B In</b>	Used in a dual cable system to receive both cables; verify the location of the A and B connectors on the A/B In module
3		<b>RF Bypass</b>	Enables the cable signal to bypass the DCT2500 and go directly to a TV or VCR
4		<b>Optical</b>	A Toslink connector to connect the DCT2500 to a digital home theater receiver.
5		<b>USB</b>	USB is used to connect to devices such as keyboards, joysticks, scanners, disk storage, PCs, printers, and digital cameras, if supported.

---

Key	Option	Name	Function
6	 PHONE	PHONE	RJ-11 telephone modem output to connect to the telephone line for systems using telco return

## Audio Output Modes

The DCT2500 includes utilities that enable you to select and adjust its DIGITAL AUDIO (coaxial or optical) or AUDIO OUT (RCA style) outputs. If the EPG takes advantage of these utilities, it provides menu choices to select and optimize the audio output and compression modes. For more information about audio output mode configuration, refer to the EPG user manual.

## Section 3

# Installation

---

This section provides installation and cabling instructions. To complete the installation, you must:

- Connect the cables
- Supply power to equipment
- Download configuration information and software
- Run operational check and diagnostics

## Before You Begin

Before you begin, review the installation instructions, gather the required items, and complete the following tasks:

- Determine if the subscriber requirements include an A/B In, or RF Bypass module. You can install these options before leaving the office following the instructions provided with each module.
- Verify that you have 75-ohm coaxial cables with F-type connectors and RCA baseband phono-type cables.
- Determine if you are connecting the DCT2500 to a standard TV or a composite (baseband) monitor.
- Place the DCT2500 on a smooth, flat surface and remove any obstructions that could interfere with the free flow of air over, under, or around it. Advise the subscriber not to place anything on top of the unit.

## Installing the DCT2500


To install the DCT2500:

- 1 Determine if you are connecting the DCT2500 to a conventional TV or to a monitor. To install the video connection:
  - For a conventional TV, use a 75-ohm coaxial cable with F-type connectors.
  - For a monitor, use an RCA phono cable to connect the VIDEO connector to the monitor.
- 2 Locate the cabling diagram that most closely matches the subscriber's configuration requirement.
- 3 Connect the cables as illustrated in the diagram.
- 4 Perform the basic operational check in this section after the DCT2500 is installed.
- 5 If you are using the Telco return option, connect the DCT2500 to the subscriber's phone line.

### Standard Cabling Diagram

The DCT2500 outputs on channel 3 or 4, depending on the configuration from the addressable controller:

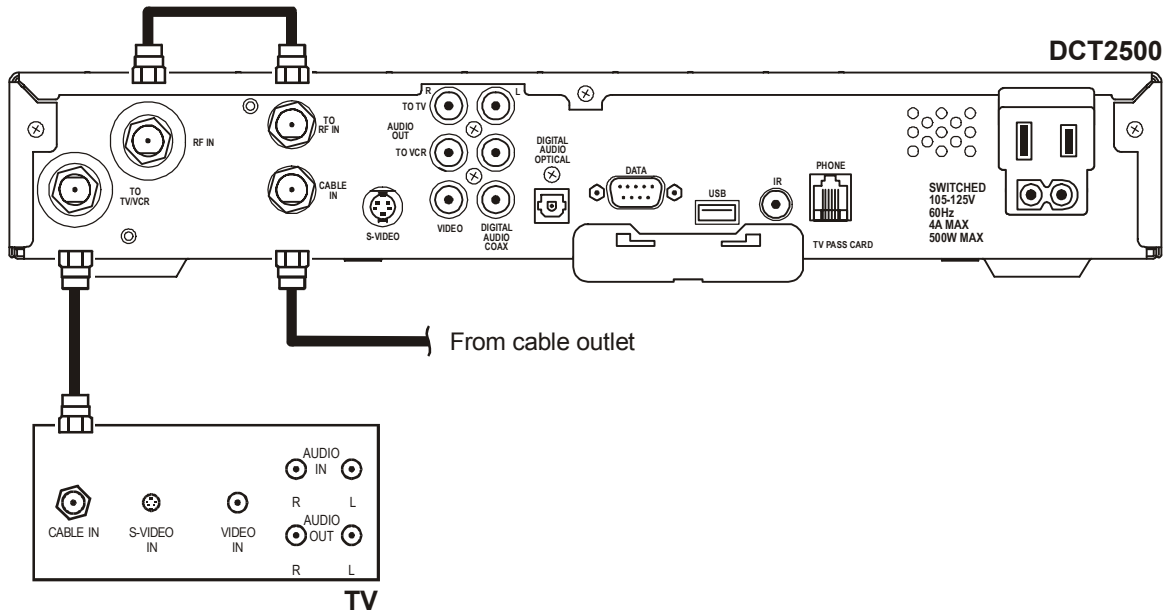Figure 3-1  
Standard cabling to a TV using RF connectors






## Standard VCR Cabling Diagram

Figure 3-2 illustrates the basic cabling required to record the channel being viewed:

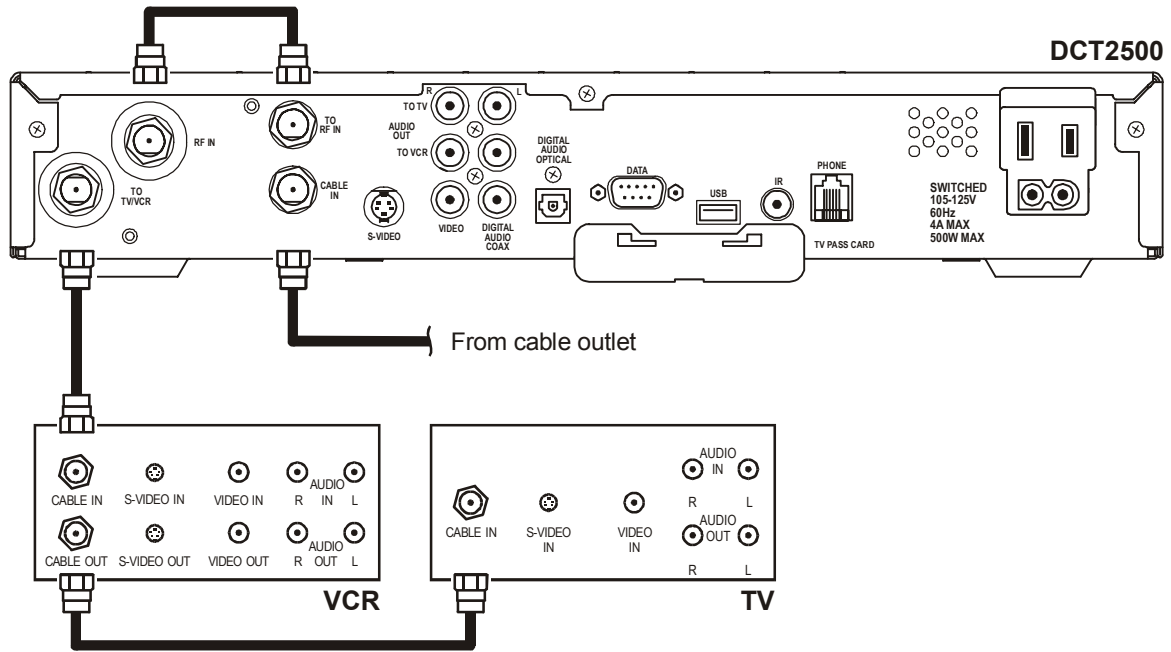
**Figure 3-2**  
Standard VCR cabling



### VCR Cabling With RF Bypass Switch Diagram

The RF Bypass module enables viewing of an unscrambled analog channel on TV while recording another channel through the DCT2500. Proper RF Bypass operation requires special configuration on the addressable controller and the EPG.

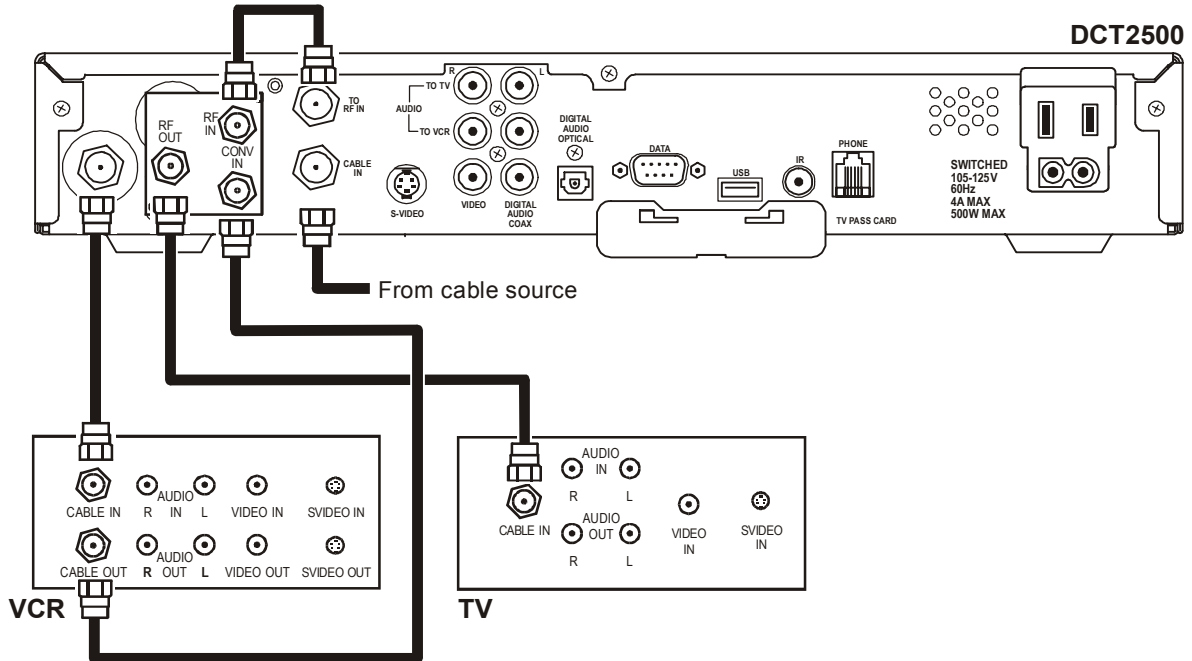
**Figure 3-3**  
Cabling with the RF Bypass module (using RF return)



## A/B In Module Cabling Diagrams

The A/B In module is commonly used in dual-cable systems.

**Figure 3-4**  
A/B In module on a DCT2500 using optional telco return

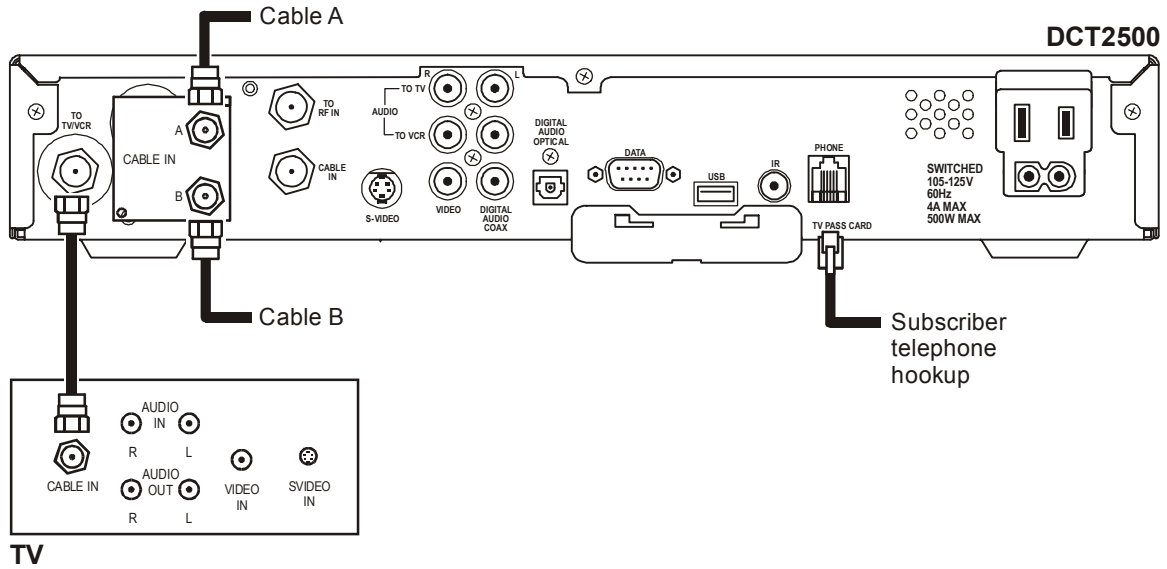

**Figure 3-5**  
A/B In module on a DCT2500 with the return on Cable A


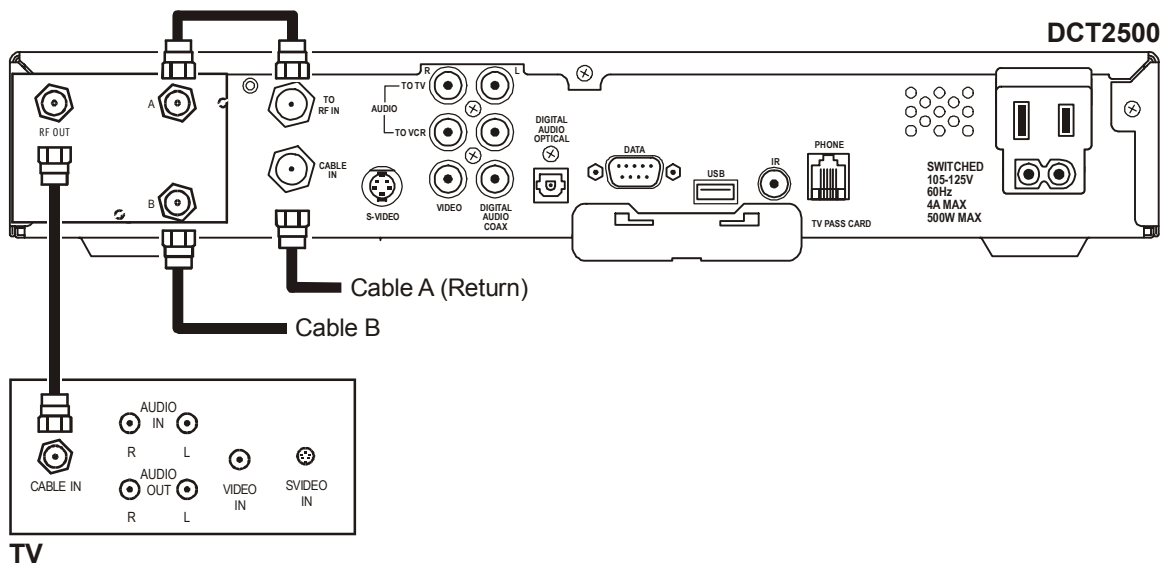



Figure 3-6  
A/B In module on a DCT2500 with return on Cable B

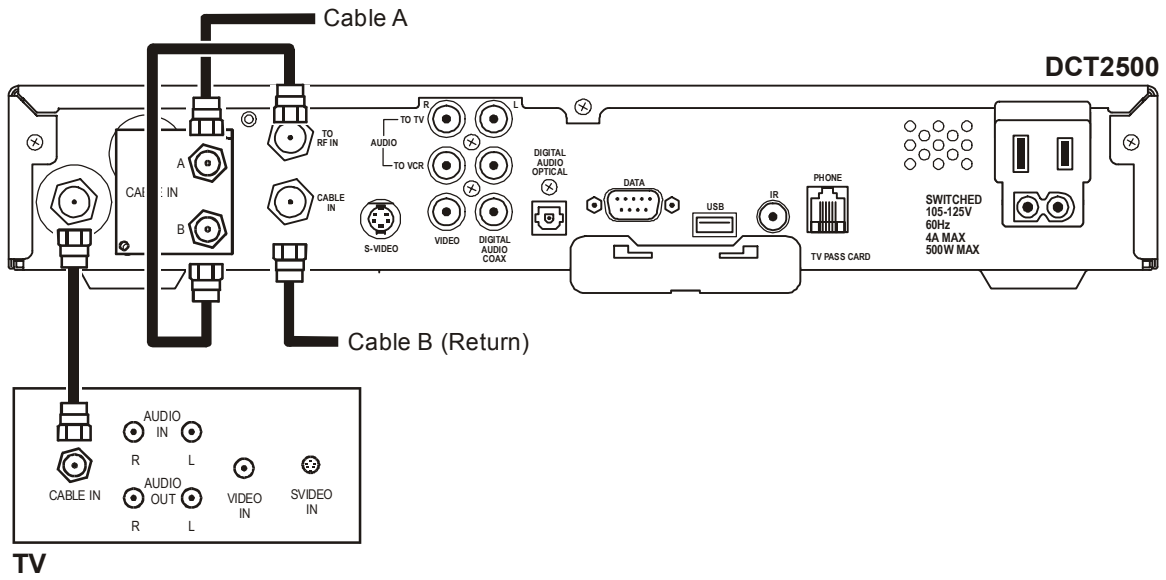

## Composite Baseband and S-Video Cabling Diagrams

Connecting the DCT2500 using the baseband RCA type outputs enables the subscriber to experience stereo and Dolby Surround sound on digital channels when available.

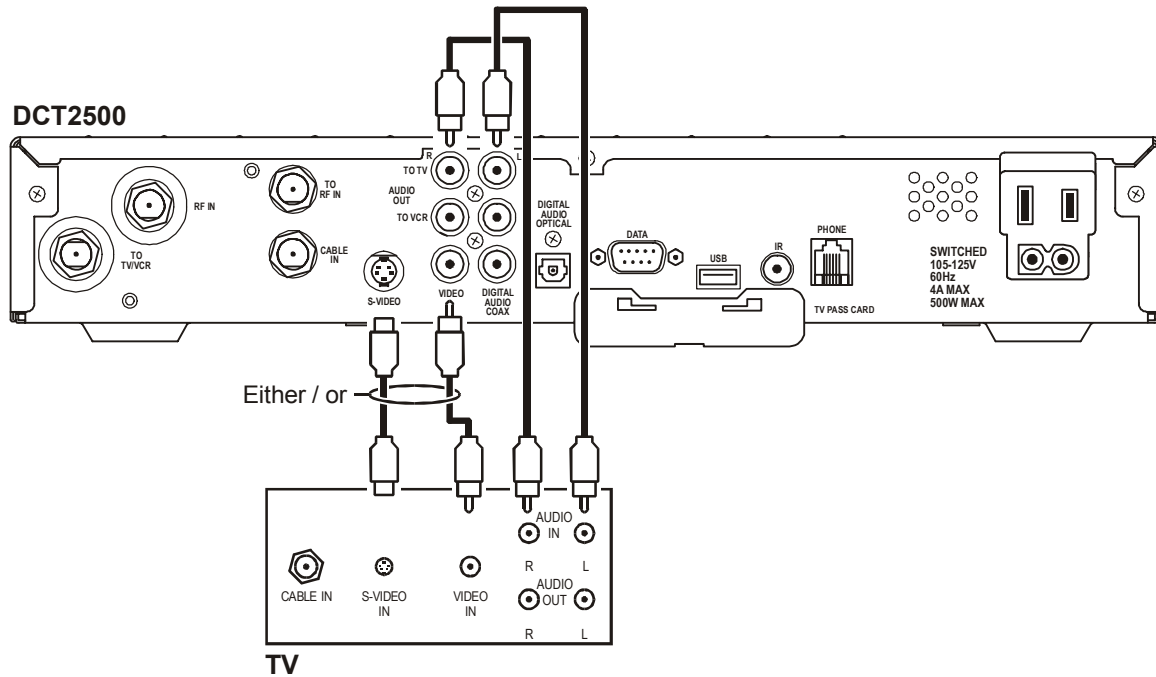**Figure 3-7**  
Standard baseband audio and video outputs




The S-Video connector is part of the Home Theatre option and is not included on all DCT2500s.

*When connecting the video path, connect either the baseband composite video or S-video to the input device you plan to use. Do not connect both the baseband composite video and S-video. Some electronic equipment will not support both video inputs simultaneously.*

Figure 3-8 illustrates the DCT2500 baseband audio and video outputs for connecting to a VCR:

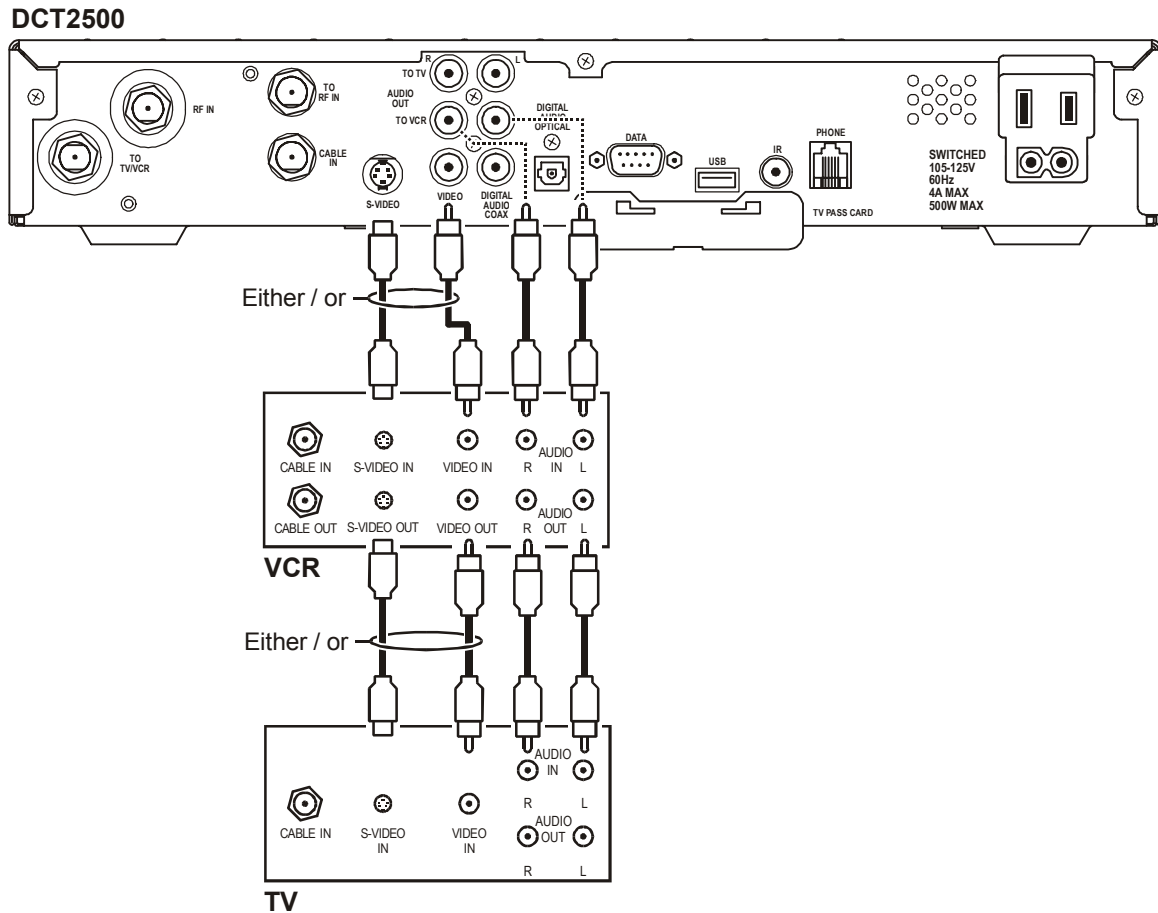**Figure 3-8**  
Composite VCR cabling




The S-Video connector is part of the Home Theatre option and is not included on all DCT2500s.

*When connecting the video path, connect either the baseband composite video or S-video to the input device you plan to use. Do not connect both the baseband composite video and S-video. Some electronic equipment will not support both video inputs simultaneously.*

### Stereo Cabling Diagram (Baseband)

This audio configuration does not provide for a TV playing through the stereo:

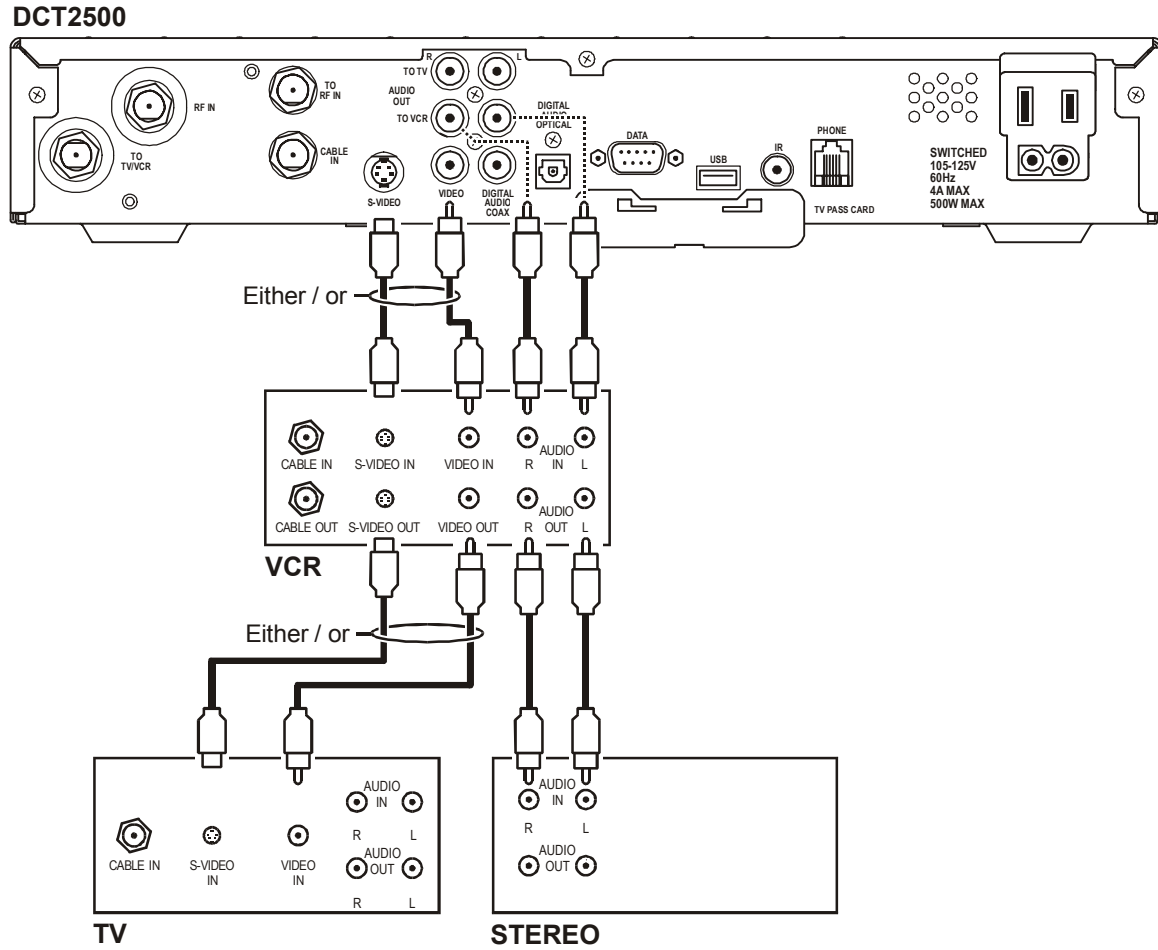**Figure 3-9**  
Connecting the DCT2500 to a stereo using the audio connectors on the VCR




The S-Video connector is part of the Home Theatre option and is not included on all DCT2500s.

*When connecting the video path, connect either the baseband composite video or S-video to the input device you plan to use. Do not connect both the baseband composite video and S-video. Some electronic equipment will not support both video inputs simultaneously.*

Figure 3-10 shows connecting the DCT2500 to a stereo to enable the TV to play through the stereo:

- Audio loop-through connectors on the VCR
- Audio output ports on the TV monitor

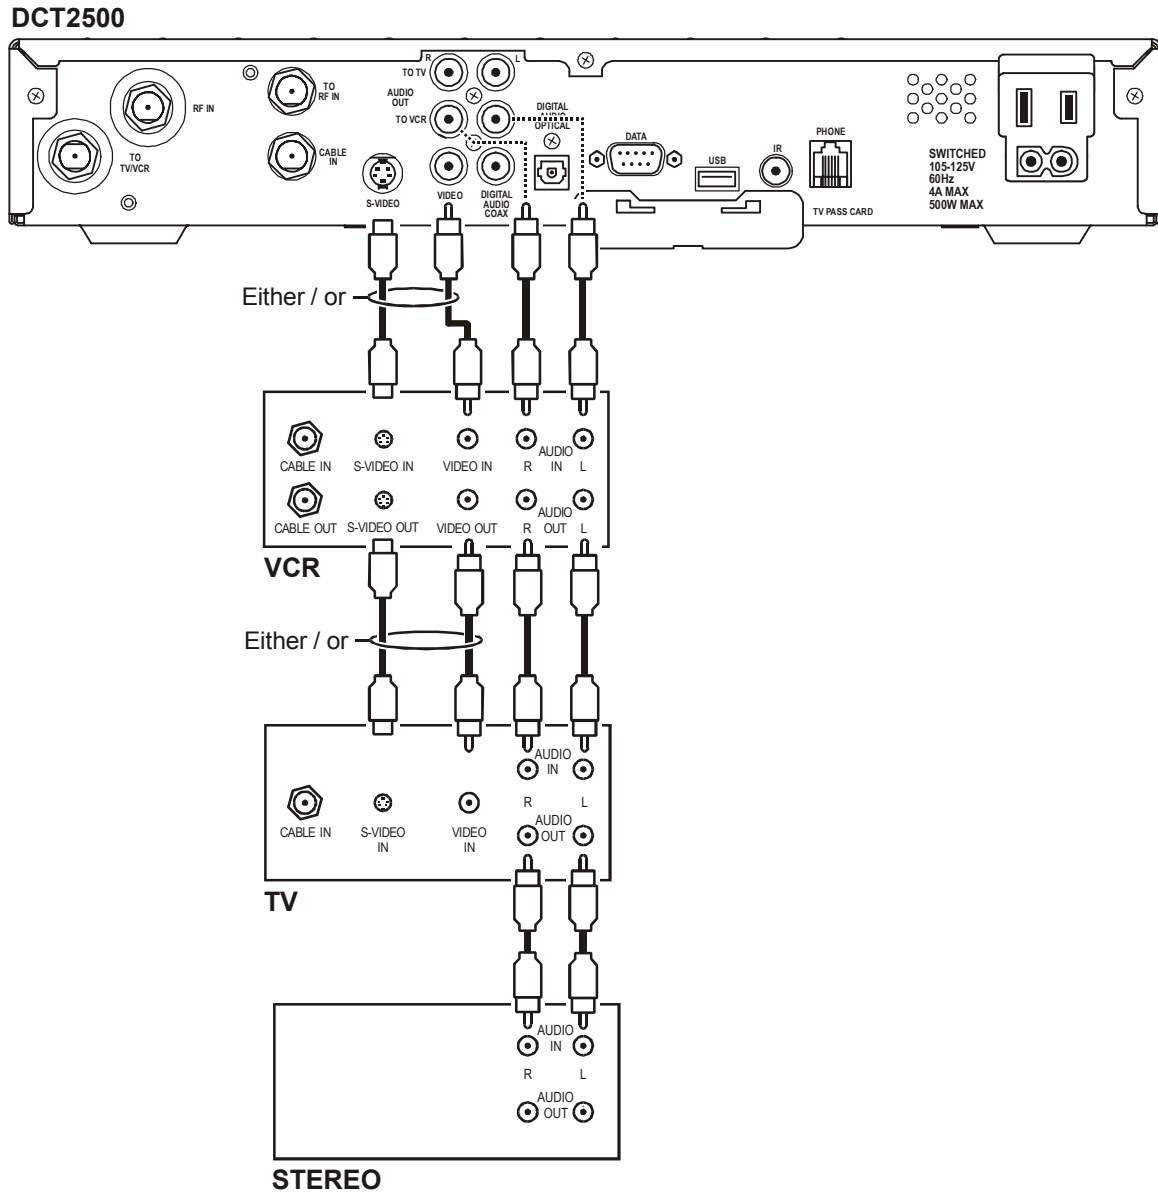**Figure 3-10**  
Audio on VCR/audio output on TV



The S-Video connector is part of the Home Theatre option and is not included on all DCT2500s.

*When connecting the video path, connect either the baseband composite video or S-video to the input device you plan to use. Do not connect both the baseband composite video and S-video. Some electronic equipment will not support both video inputs simultaneously.*



## Home Theater Receiver Cabling Diagram

Figures 3-11 and 3-12 show cabling for digital audio output. The DIGITAL AUDIO COAX and DIGITAL AUDIO OPTICAL connectors provide the same functionality.

**Figure 3-11**  
Connections to a home theater receiver using DIGITAL AUDIO COAX


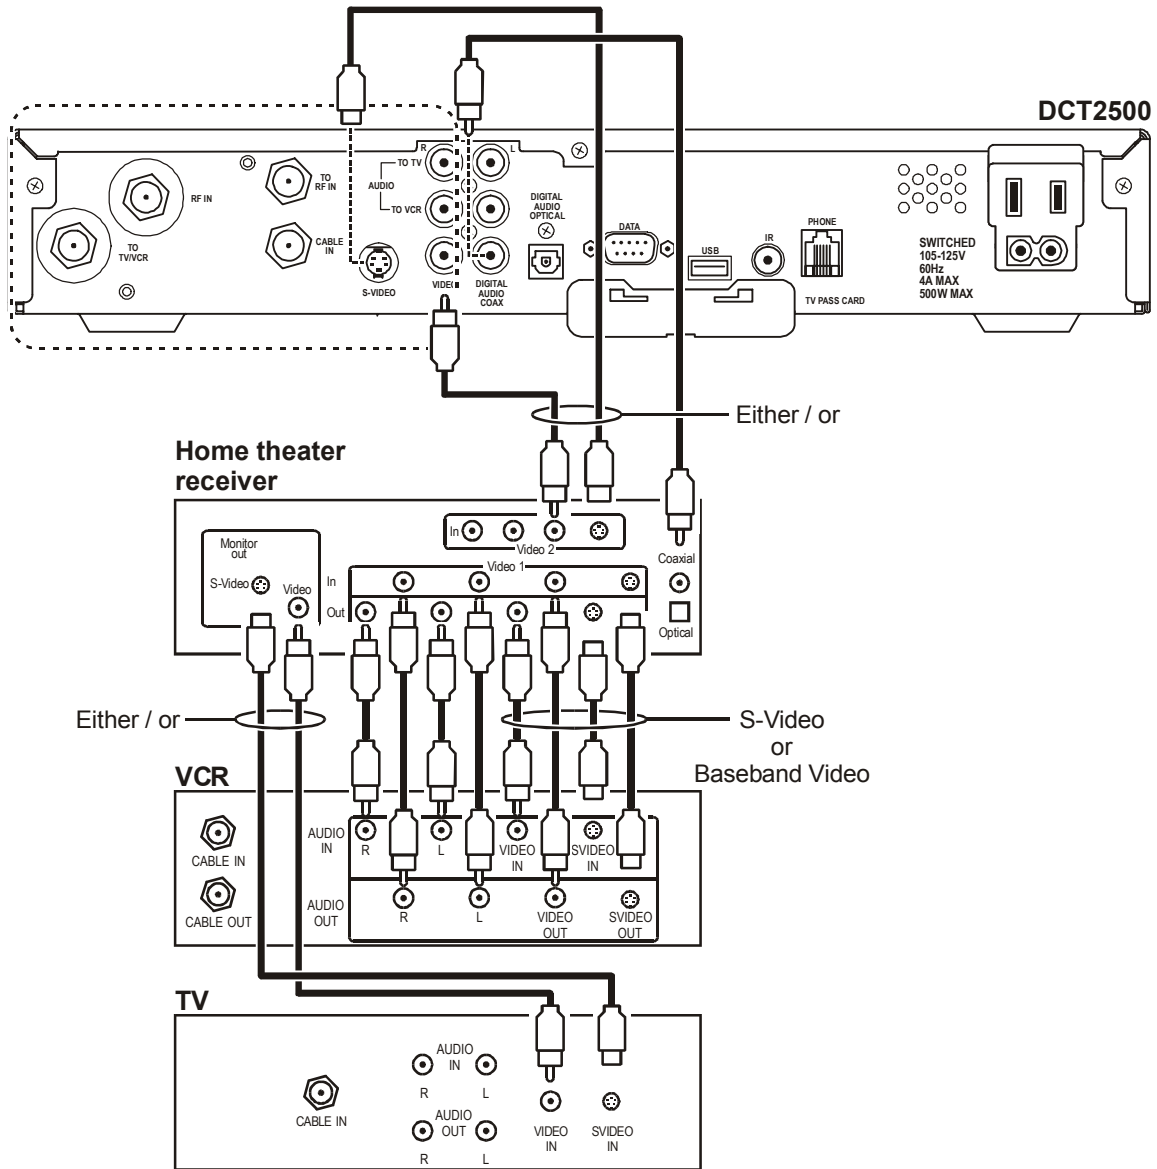


Figure 3-12  
Connections to a home theater receiver using DIGITAL AUDIO OPTICAL

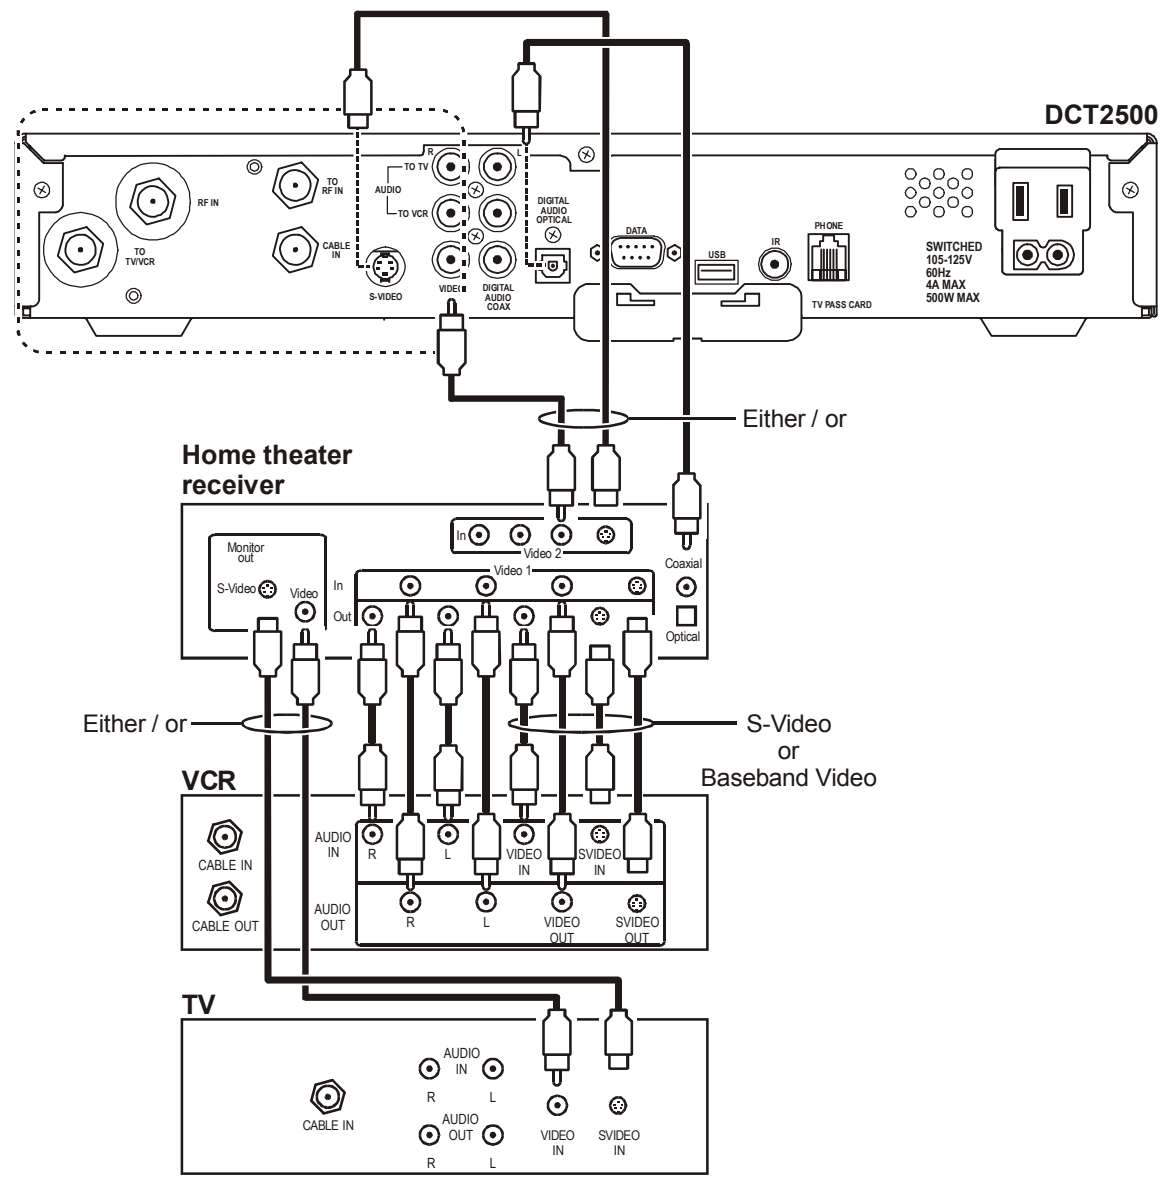

## Operational Check

The operational check tests the communication link between the remote control and the DCT2500 to verify the DCT2500 response to remote control commands:

**Table 3-1**  
Operational check procedures

<b>Feature</b>	<b>Testing Procedure</b>
<b>Power on</b>	<ul style="list-style-type: none"><li>▪ Press <b>POWER</b> to turn on the DCT2500.</li><li>▪ Turn the TV on and tune it to the DCT2500 output channel 3 or 4.</li></ul>
<b>Channel Selection</b>	<ul style="list-style-type: none"><li>▪ Scan through the channels using the <b>CHANNEL ▲ ▼</b> keys on the DCT2500 and the <b>CHANNEL + -</b> keys on the remote control.</li><li>▪ Tune to several channels by entering the channel number with the numeric keys on the remote control.</li></ul>
<b>Volume Control</b>	<ul style="list-style-type: none"><li>▪ Use the TV volume control to adjust the sound volume to a moderate level.</li><li>▪ Press <b>VOLUME + -</b> on the remote control to increase the volume to its upper limit, lowest level, and to a comfortable level.</li><li>▪ Press <b>MUTE</b> to turn the sound completely off. Press <b>MUTE</b> again to restore the sound.</li></ul>

If the DCT2500 does not operate properly, refer to Section 5, “Troubleshooting.”


## Section 4

# Adding the IR Blaster Option

---

The IR Blaster provides control of the subscriber's VCR from the DCT2500. It consists of a low-power infrared transmitter attached to a six-foot cord and a mounting bracket. The mounting bracket is a clear plastic holder with a pad of adhesive tape for installing the IR Blaster near the VCR IR receiver. A mini-pin connector at the end of the cord connects the IR Blaster to the DCT2500.

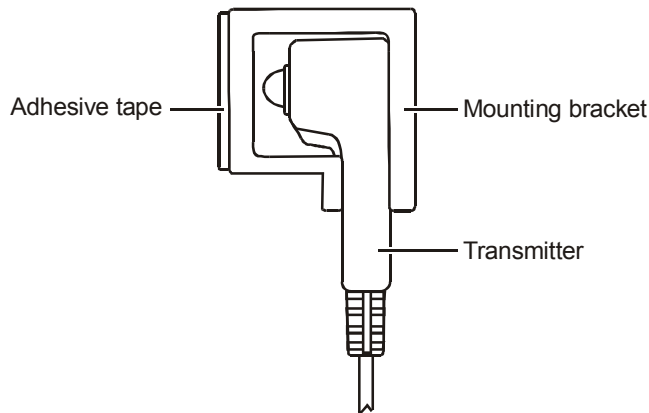**Figure 4-1**  
IR transmitter installed in mounting bracket



*The IR Blaster is controlled by the interactive program application on the DCT2500. Not all applications support the optional IR Blaster.*

The IR Blaster is automatically activated through the EPG. Individual VCR codes are broadcast through the out-of-band data channel and are updated periodically as new codes are added.

## Locating the IR Receiver on the VCR

The IR receiver is not visible on some VCRs.

To locate the receiver:

- 1 Obtain a piece of opaque material, such as a 3- by 5-inch index card.
- 2 Use the card to block areas of the VCR where the receiver might be located. Turn the VCR on and off, while pointing the remote control at the card blocking the VCR. Be sure the remote control is close to the VCR to reduce reflections the receiver may pick up.
- 3 Note the area where the VCR is unresponsive to the remote control. This region contains the receiver and can be marked by loosely taping the index card to the area.


Because the IR Blaster radiates an area approximately 40 degrees wide, it is not necessary to be precisely on target with the remote control. Offset the location of the IR Blaster transmitters from the VCR receiver to reduce interference with operation of the VCR remote control.

## Installing the IR Blaster

To install the IR Blaster:

- 1 Fit the transmitter into the mounting bracket (refer to Figure 4-1).
- 2 Plug the mini-phone connector into the IR jack on the rear panel of the DCT2500 rear panel (refer to Figure 4-2).

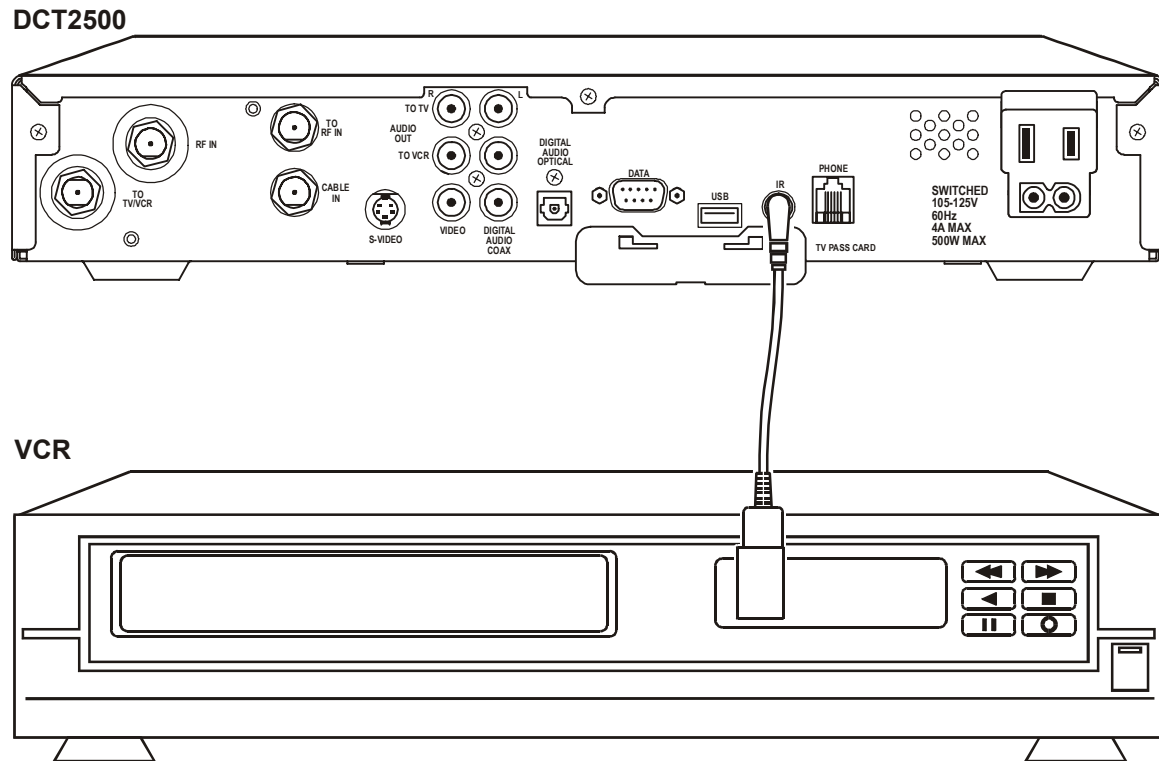**Figure 4-2**  
IR Blaster installed



- 3 Remove the adhesive tape cover from the mounting bracket.
- 4 Position the IR receiver off center of the VCR receiver and then press firmly attaching the mounting bracket on the VCR. Be careful to route the wire so that it does not prevent loading videotapes.

## Checking the Installation

The IR Blaster is now located near the receiver and the VCR can be controlled through the DCT2500. As a final check, operate the VCR using the remote control from various positions in the room. If the IR Blaster is obstructing the IR receiver on the VCR, move it slightly.

## Section 5

# Troubleshooting

---

This section provides information to help you quickly detect, isolate, and resolve errors that might occur when using the DCT2500. If you need assistance, call the TRC:

- Inside the U.S.: **1-888-944-HELP (1-888-944-4357)**
- Outside the U.S.: **1-215-323-0044**

Table 5-1 lists possible problems and solutions:

**Table 5-1**  
**Troubleshooting guidelines**

<b>Problem</b>	<b>Possible Solution</b>
<b>No power to the DCT2500</b>	<p>Check the power outlet for AC power.</p> <p>Be sure the TV is tuned to the output channel of the DCT2500 (channel 3 or 4).</p> <p>Verify that cable connections are correct from the TV set or monitor to the DCT2500.</p> <p>Check that the power cord is properly plugged into the outlet and DCT2500.</p>
<b>Remote control is not responding</b>	<p>Check for an obstruction between the remote control and the DCT2500. Aim the remote control directly at the DCT2500, not the TV or VCR.</p> <p>Be sure you firmly and deliberately press and release operation keys one at a time.</p> <p>Verify that channels can be changed using the keys on the front panel and then check that the batteries have been installed properly. Replace with new batteries if necessary.</p> <p>Check that the DCT2500 has been initialized correctly; refer to Diagnostics.</p>
<b>The DCT2500 is not receiving a cable signal</b>	<p>Check the cable connections and hand-tighten if necessary.</p> <p>Verify that the cable connections are correct.</p> <p>Verify the TV is working and has a clear picture.</p>
<b>Guide has no data</b>	<p>Unplug the power to the DCT2500 and plug in the unit again. Wait for the DCT2500 to collect the data.</p>
<b>VCR did not record</b>	<p>Turn the VCR off when you are not using it.</p> <p>Be sure the IR Blaster is correctly placed.</p> <p>Check the Scheduled Events list to be sure programs are scheduled for recording.</p>

## Appendix A

# Diagnostics

---

This appendix describes the on-screen diagnostics used to confirm proper DCT2500 installation, including:

- Checking error states and signal integrity
- Identifying the set-top on the network
- Verifying communications with the headend

For the diagnostics provided here:

- All indicators are in decimal notation, unless otherwise noted.
- All signal-level and quality indicators are on a 0 to 100% scale, unless otherwise noted.
- All screens self-refresh at a minimum rate of once every five seconds.
- All sample displays are illustrative; actual data will differ from the examples.
- The screens are available for V1.08 code and higher.

## Using Diagnostics

To operate the set-top, use the Motorola universal remote control. To access and navigate the diagnostic mode:

- 1 Press **POWER** on the remote control to turn on the set-top.
- 2 Wait five seconds and then press **POWER** again to turn off the set-top.
- 3 To enable diagnostic mode, press **SELECT/OK** on the remote control within two seconds after powering off. The **DIAGNOSTICS** main menu is displayed on the OSD:

```
DIAGNOSTICS
01     GENERAL STATUS
02     OOB STATUS
03     IN BAND STATUS
04     AUDIO/VIDEO STATUS
05     UNIT ADDRESS
06     FIRMWARE VERSION
07     CURRENT CHANNEL STATUS
08     RENEWABLE SECURITY
09     UPSTREAM MODEM
10     APP CODE MODULES
11     MEMORY CONFIG
12     INTERACTIVE INFO
13     MAC FREQUENCY TABLE
14     CONTROL CHANNELS
15     MESSAGE TYPES
16     IN BAND PAT
17     IN BAND PMT
18     TASK STATUS
19     USB STATUS
20     IB MCA STATUS
21     KEYBOARD / LED
```

- 4 Use the **CHANNEL** keys on the remote control to select the desired diagnostic.
- 5 Press **CURSOR <**, **CURSOR >**, **SELECT**, or **ENTER** to run the selected diagnostic.
- 6 To exit the diagnostic mode, press **POWER** on the remote control. The set-top exits the diagnostic mode and powers off.



The complete list of remote control buttons you can use to navigate the diagnostics is:

Button	Function using the diagnostics main menu	Function using a diagnostic
<b>POWER</b>	Exits diagnostic mode and enters OFF state	Exits diagnostic mode and enters OFF state
<b>CH/CUR +, CURSOR UP</b>	Moves the cursor up	Displays the DIAGNOSTICS main menu
<b>CH/CUR -, CURSOR DOWN</b>	Moves the cursor down	Displays the DIAGNOSTICS main menu
<b>CURSOR RIGHT, CURSOR LEFT, SELECT, ENTER</b>	Runs the selected diagnostic	Displays the DIAGNOSTICS main menu
<b>GUIDE</b>	None	None
<b>MENU</b>	None	None
<b>INFO</b>	None	None

## d 01: General Status

This diagnostic displays the error code and description, purchase count, and other information:

DCT2500 STATUS	
ERROR	: E 00
NO ERROR	
PURCHASES	: 0
Platform ID:	: 0x0060
Family ID	: 0x0000
Model ID	: 0x008F
TUNER	: V860DL
Remod Channel	: 3
Time Zone (hhhhhhhh)	MMMM min
DS Entry Time 1/1/1999	00:00 GMT
DS Exit Time 1/1/1999	00:00 GMT
Current GPS Time 1/1/1999	00:00 GMT

The General Status fields are:

<b>Field</b>	<b>Description</b>
<b>Error Codes</b>	When there is a problem, the error code is displayed and LEDs on the unit flash, as described in "Error Codes." E 00 means there is no error.
<b>Connected State</b>	The state of the set-top is connected or disconnected. The connected state of the set-top is set by a DCT-operations connect or disconnect message. The OSD displays DISCONNECTED when the set-top is in the disconnected state and CONNECTED when it is in the connected state.
<b>Platform ID</b>	A 16-bit hexadecimal number used to differentiate between digital platform images in the field. It is also called the ROM ID.
<b>Family ID</b>	A hexadecimal number that indicates the set-top manufacturer and product family.
<b>Model ID</b>	A hexadecimal number that indicates the set-top model.
<b>Remod Channel</b>	The Remod Channel number can be 3 or 4 (NA systems). The output port configuration displays the configuration of the set-top output or re-modulated (remod) port. The output port/remod port is the interface from the set-top to the subscriber TV.
<b>Time Zone</b>	The time zone offset (in minutes) relative to GMT.
<b>DS Entry Time</b>	The daylight savings entry time.
<b>DS Exit Time</b>	The daylight savings exit time.
<b>Current GPS Time</b>	The current time.

## Error Codes

The front panel of the DCT2500 displays error codes when error conditions occur. The errors, causes, and remedies are:

Code	OSD	Cause	Remedy
E 00*	NO ERROR	Indicates normal condition after initialization	None
E 01*	NOT CONNECTED	The set-top did not receive a connect message	Restore out-of-band signal Send a connect message
E 02	PWR CYCLE	Init Error	The set-top needs a power cycle to recover
E 03	DRAM	DRAM error	Not used
E 04	DPSRAM	DP-SRAM error	Not used
E 07	ROM	ROM verification failure	Power cycle the set-top; if repetitive, return for repair
E 08	RAM	Faulty RAM, ROM, EEPROM, or POST failure (this is a hardware failure)	Return the set-top for repair
E 09	BATTERY	Dead battery or memory has not been initialized; occurs if battery fails to keep the RAM alive during power-down; disconnects the set-top	Return the set-top for repair; requires factory initialization message
E 10	SERIALNO	Invalid serial number	Not used
E 11	INVALID UNIT ADDRESS	Invalid unit address	Return the set-top for repair; requires a unit creation message
E 12	POST ERROR	POST failed	Not used
E 13	BOOT	Sys_boot initialization failure	Power cycle the set-top; if repetitive, return for repair
E 14	STARTUP	System startup failure	Power cycle the set-top; if repetitive, return for repair
E 15	TSI INVALID	TSI structure is corrupted	Power cycle the set-top; if repetitive, return for repair
E 16	FLASH BAD NUMBER	Bad flash number specified for Initiate Flash Platform	Error logged, ignore
E 17	BAD PLATVAL	Bad platform validation step number	Error logged, ignore

\* E 00 and E 01 cannot be displayed on the LED when the set-top is off. All other errors display on the LED when the set-top is off.

Only the *V860DL* and *ACD2204* tuner appear on the on-screen display.

## V860DLd 02: Out-of-Band (OOB) Diagnostic

This diagnostic indicates the status of the out-of-band control channel:

OOB DIAGNOSTIC			
DATA	*	SNR	23 dB GOOD
EMM DATA	*		
CARRIER LOCK	YES	COUNT	1
HUNT MODE	None		
CUR FREQ			
LKC			
EMM PRVDR ID	0x0001		

The OOB Diagnostic fields are:

Field	Description										
<b>Data</b>	The OSD indicates with a "*" that data has been received. The indicators cover all packet processors regardless of which stream they are monitoring and are cleared when you enter the diagnostic.										
<b>EMM Data</b>	Indicates whether the set-top is receiving a message on the EMM stream with the following variables: <table> <tbody> <tr> <td><b>Blank</b></td> <td>No data received</td> </tr> <tr> <td><b>*</b></td> <td>Data received</td> </tr> </tbody> </table> <p><i>The set-top can receive only six PIDs at once. Data on PIDs can be present on the out-of-band multiplex that the set-top is not receiving.</i></p>	<b>Blank</b>	No data received	<b>*</b>	Data received						
<b>Blank</b>	No data received										
<b>*</b>	Data received										
<b>Carrier Lock</b>	The CARRIER LOCK is reset to "1" after an initialization from the DAC 6000 or a power cycle. Each time the <i>set-top</i> detects a drop in OOB connectivity, the counter increments. The following Carrier Lock variables can display: <table> <tbody> <tr> <td><b>YES</b></td> <td>Carrier locked</td> </tr> <tr> <td><b>NO</b></td> <td>Carrier unlocked</td> </tr> </tbody> </table>	<b>YES</b>	Carrier locked	<b>NO</b>	Carrier unlocked						
<b>YES</b>	Carrier locked										
<b>NO</b>	Carrier unlocked										
<b>Hunt Mode</b>	The state of OOB stream acquisition. The Hunt Mode can be: <table> <tbody> <tr> <td><b>None</b></td> <td>The set-top is locked to an OOB carrier.</td> </tr> <tr> <td><b>RR (Round Robin)</b></td> <td>The set-top is searching OOB frequencies trying to find an EMM Provider of 0 or 1.</td> </tr> <tr> <td><b>EMM</b></td> <td>The set-top received a Provider ID change and is searching OOB frequencies for the new ID.</td> </tr> <tr> <td><b>FIX</b></td> <td>The set-top has been commanded to attempt to lock onto a frequency.</td> </tr> <tr> <td><b>SRCH</b></td> <td>The set-top at some point had a valid Provider ID on the OOB frequency and is attempting to re-acquire it.</td> </tr> </tbody> </table>	<b>None</b>	The set-top is locked to an OOB carrier.	<b>RR (Round Robin)</b>	The set-top is searching OOB frequencies trying to find an EMM Provider of 0 or 1.	<b>EMM</b>	The set-top received a Provider ID change and is searching OOB frequencies for the new ID.	<b>FIX</b>	The set-top has been commanded to attempt to lock onto a frequency.	<b>SRCH</b>	The set-top at some point had a valid Provider ID on the OOB frequency and is attempting to re-acquire it.
<b>None</b>	The set-top is locked to an OOB carrier.										
<b>RR (Round Robin)</b>	The set-top is searching OOB frequencies trying to find an EMM Provider of 0 or 1.										
<b>EMM</b>	The set-top received a Provider ID change and is searching OOB frequencies for the new ID.										
<b>FIX</b>	The set-top has been commanded to attempt to lock onto a frequency.										
<b>SRCH</b>	The set-top at some point had a valid Provider ID on the OOB frequency and is attempting to re-acquire it.										
<b>CUR Freq</b>	The current out-of-band frequency.										
<b>LKC</b>	The last known carrier (OOB frequency that had correct Provider ID).										
<b>EMM Provider ID</b>	The ID of the provider of the Entitlement Management Message (EMM).										

## Selecting the OOB Frequency

To select the OOB frequency:

- 1 From the OOB STATUS diagnostic, press the **MENU** button to enter the frequency selection mode. The OSD displays a new **MANUAL FREQ** line at the bottom of the screen, indicating the LKC frequency.
- 2 Press the **MENU** key a second time to exit the frequency change mode.

Or

Press the **UP/DOWN** channel or cursor keys to scroll through the frequencies to locate the desired OOB frequency. The frequency selection appears on the **MANUAL FREQ** line of the OSD.

The first frequency to display is 75.25. The system scrolls through each frequency until it reaches the last, 103.75, and then scrolls back to the beginning. This diagnostic scrolls through the OOB frequencies in the following order:

- 75.25 MHz
- 104.20 MHz
- 72.75 MHz
- 92.25 MHz
- 98.25 MHz
- 107.25 MHz
- 107.40 MHz
- 110.25 MHz
- 116.25 MHz
- 103.75 MHz

- 3 Press **SELECT** search for the OOB frequency.

On the OSD, the **MANUAL FREQ** line of text clears, the **HUNT MODE** displays **FIX** to indicate the fixed frequency search, and the **CUR FREQ** field changes to the frequency selected to search.

If the frequency is found with the proper **EMM Provider ID**, the OSD **LKC** field changes to display the new frequency.

If after 40 seconds the frequency search is not successful, the set-top performs a warm reset and returns to the last known carrier frequency.

- 4 To abort a search without waiting the 40 seconds, press **POWER** to cause a warm reset.

## d 03: In-band Status

The in-band diagnostics display for the last attempted channel tune. If a digital carrier is not present, the diagnostics indicate the carrier lock is analog. When the carrier lock is analog, all fields for digital (other than a carrier lock channel) are blank.

IN BAND DIAGNOSTIC		
DATA		*
EMM DATA		*
CARRIER LOCK		YES
PCR LOCK		YES
SNR	36 dB	ssss
MODULATION MODE		QAM 64
SHORT TERM ERROR COUNT		0000
LONG TERM ERROR COUNT		9999
TUNED FREQ		543.000

The In-band Status fields are:

Field	Description
<b>Data Activity Indicator</b>	Lights when the set-top is receiving data on the in-band channels for all packet processors regardless of which stream they are monitoring. The following variables can display:  <b>Blank</b> No data received <b>*</b> Data received
<b>EMM Data Indicator</b>	Lights when the set-top is receiving a message on the EMM stream. The indicator is clear when entering this diagnostic. The following variables can display:  <b>Blank</b> No data received <b>*</b> Data received
<b>Carrier Lock</b>	Indicates whether the digital in-band receiver is locked to the carrier with the following variables: <b>YES</b> Carrier locked <b>NO</b> Carrier unlocked <b>Analog</b> Analog channel
<b>PCR Lock</b>	Indicates a program-clock-reference lock with the current digital data stream.
<b>SNR</b>	Displays an estimate, in dB, of the carrier signal-to-noise ratio (SNR). This estimate is based on the QAM cluster variance, which is proportional to the SNR. ssss can be:  <b>GOOD</b> Good signal <b>FAIR</b> Marginal signal level – check the signal <b>POOR</b> Unusable signal
<b>Modulation Mode</b>	Displays the following variables: <b>Analog</b> Analog channel <b>QAM 64</b> Digital channel <b>QAM 256</b>

Field	Description
<b>Short Term Error Count</b>	The FEC errors (maximum count of 65535) at 5-second intervals. The Short Term Error Count is cleared after polling.
<b>Long Term Error Count</b>	The accumulation of the Short Term Error Count (maximum count of 65535). The Long Term Error Count is cleared every 24 hours.
<b>Tuned Frequency</b>	The actual frequency the tuner is programmed (Carrier Definition Frequency + 1.75 MHz).

## d 04: Audio/Video Status

This diagnostic displays the audio and video status for the tuned channel.

AUDIO/VIDEO STATUS	
ADP Lock	YES
Audio Mode	STEREO
Audio SPDIF	2/0 LFE 0
VP Lock	YES
MPEG Method	MUTE BLACK

The Audio/Video Status fields are:

Field	Description
<b>ADP Lock</b>	The Audio Processor locked status: YES or NO
<b>Audio Mode</b>	The audio modes are: <ul style="list-style-type: none"> <li>▪ N/A</li> <li>▪ Mono</li> <li>▪ Stereo</li> <li>▪ Surround</li> </ul>
<b>Audio SPDIF</b>	For analog channels, SPDIF output is in IEC958PCM format. For digital channels, the possible Dolby Digital modes are: <ul style="list-style-type: none"> <li>▪ 1+1 — left is channel 1, right is channel 2</li> <li>▪ 1/0 — center</li> <li>▪ 2/0 — left, right</li> <li>▪ 2/1 — left, center, right</li> <li>▪ 3/1 — left, right, surround</li> <li>▪ 2/2 — left, right, left surround, right surround</li> <li>▪ 3/2 — left, center, right, left surround, right surround</li> <li>▪ LFE 0 — low frequency effects (subwoofer) channel not available</li> <li>▪ LFE 1 — low frequency effects (subwoofer) channel available</li> </ul>
<b>VP Lock</b>	The Video Processor locked status: YES or NO
<b>MPEG Method</b>	The MPEG Method selected: <ul style="list-style-type: none"> <li>▪ Unmuted</li> <li>▪ Mute Still</li> <li>▪ Mute Black</li> </ul>

## d 05: Unit Address

This diagnostic displays the 16-digit (40-bit) unit address of the set-top.

```

DCT2500 UNIT ADDRESS:
000-02831-99902-038

Network Address:
085-14316-55765-159

TVPC:
000-00000-00000-000

Multicast 16 Address:
085.085  102.102
119.119  136.136

DATA
068.068  051.051
034.034  017.017

Seed Health      0xFF
  
```

The Unit Address fields are:

Field	Description
<b>DCT2500 Unit Address</b>	The unit address in decimal format (13 address digits and three check digits)
<b>Network Address</b>	The network address in decimal format (13 address digits and three check digits)
<b>TVPC</b>	The TV Passcard Address in decimal format (13 address digits and three check digits)
<b>Multicast 16 Address</b>	The Multicast 16 address numbers change to display the values for each data stream in TCP/IP decimal byte form. Here is a list of Multicast 16 addresses: <ul style="list-style-type: none"> <li>▪ NET</li> <li>▪ EMM</li> <li>▪ SCC</li> <li>▪ DWLD</li> <li>▪ DATA</li> <li>▪ VCN</li> <li>▪ POLL</li> </ul>
<b>Seed Health</b>	This value represents the health of the set-top and should be 0xFF. If it is not 0xFF, see the "Troubleshooting" section for more information.



## d 06: Firmware Version

This diagnostic displays the:

- Dena firmware version or revision number
- Build date and time
- TSODA firmware version number
- CAMEL (CMLBK) firmware version number (always 0000)

The BOOT is the lowest firmware code level that can be used on the DCT2500.

```

FIRMWARE VERSION
1.09                                BOOT 1.06
Jun 9, 2003
10:40:21

TSODA t16

CMLBK 0000

```

## d 07: Current Channel Status

This diagnostic displays the status of the last attempted tune on the in-band tuner. It shows channel type (analog/digital), acquisition state, purchasable indicator, preview indicator, parental control status, and mute status.

```

CURRENT CHANNEL STATUS

TYPE DIGITAL          aaa bb
STATUS                ccccc
CONNECTED             ddd
PREVIEW               NO

                        CURR      NEXT
PURCHASABLE           NO         --
PURCHASED              NO         --
EPOCH NUM              0X0        1
EPOCH TYPE             0x0        0x0
AUTH                   0X0        0X0

SERVICE 0 STATUS 1 ID 0X0004 0X00
CH 204      TUNED FREQ 543.000

```

The Current Channel Status fields are:

Field	Description
<b>Type</b>	Indicates whether the current channel is analog or digital*
<b>Status</b>	Indicates the channel type*
<b>Connected</b>	Indicates whether the set-top is connected*
<b>Preview</b>	Indicates whether the program is in the free preview state: YES or NO.
<b>Purchasable</b>	Indicates whether the current or next program can be purchased: YES or NO.
<b>Purchased</b>	Indicates whether the current or next program has been bought: YES or NO.
<b>CH</b>	Indicates the channel currently tuned when the OSD appeared.
<b>Tuned Frequency</b>	The actual programmed tuner frequency (Carrier Definition Frequency + 1.75 MHz).

The EPOCH Number and Type, Authorization, Service Status, and ID are for Motorola use *only*.

\* The variables *aaa*, *bb*, *cccc*, and *ddd* are:

<b>aaa</b>	For analog, it is blank. For digital, <i>aaa</i> can be: <ul style="list-style-type: none"> <li>▪ ENC – encrypted</li> <li>▪ UNE – unencrypted</li> </ul>
<b>bb</b>	The current epoch authorization reason in the <code>current_epoch_auth_reason</code> field (hexadecimal): <ul style="list-style-type: none"> <li>00 missing program re-key</li> <li>01 missing working key epoch message</li> <li>02 missing event blackout message</li> <li>03 missing category rekey</li> <li>04 old category sequence in program, rekey message</li> <li>10 program bought</li> <li>11 program bought without taping</li> <li>12 subscribed with taping</li> <li>13 subscribed without taping</li> <li>14 subscribed with taping purchasable</li> <li>15 IPPV with taping</li> <li>16 IPPV without taping</li> <li>20 bad seed checksum</li> <li>21 bad debit buffer checksum</li> <li>30 IPPV not enabled</li> <li>31 insufficient credit to purchase</li> <li>32 show count limit exceeded</li> <li>33 debit register will overflow</li> <li>34 no AFP records available</li> <li>36 maximum package cost exceeded</li> <li>37 no IPPV overlay in message</li> <li>40 not subscribed</li> <li>41 regional blackout</li> <li>42 event blackout</li> </ul>
<b>cccc</b>	INIT – Initialized state CONF – Configured ACQUI – Acquiring the program AUTH – Authorized for the program Not A – Not authorized for the program
<b>ddd</b>	blank – Connected NOT – Not connected

## d 08: Renewable Security

The renewable security system includes a TVPC card that returns the security status to current.

RENEWABLE SECURITY	
TVPC NOT REQUIRED	
CRYPTO	NOT MATED
STATUS	00
VERSION	00

The Renewable Security fields are:

Field	Description
<b>TVPC Required / Not Required</b>	Indicates whether further operation of the set-top requires the TVPC.
<b>Crypto</b>	Lists the current mode as displayed on the CRYPTO OSD ( Stand Alone, Support, or Not Mated).
<b>Status</b>	Indicates the TVPC status with the following variables: <ul style="list-style-type: none"> <li><b>00</b> OK</li> <li><b>01</b> TVPC communication problem</li> <li><b>02</b> TVPC required</li> <li><b>03</b> Validator does not match between GK and TVPC</li> <li><b>04</b> Invalid unit key number</li> <li><b>05</b> Old TVPC unit address</li> <li><b>0a</b> TVPC not mated</li> <li><b>0b</b> TVPC /base module unit address mismatch</li> <li><b>0C</b> New TVPC, but wrong version number</li> <li><b>0d</b> TVPC unit address mismatch</li> </ul>
<b>Version</b>	Indicates the version of renewable security being used.

## d 09: Upstream Diagnostics

This diagnostic shows the upstream status and operating parameters. They differ depending on whether the STARVUE II RF return or the optional telephone modem return is in use.

### RF Return (STARVUE II) Diagnostics

STARVUE II DIAGNOSTICS	
STATUS :	DISABLED
FREQUENCY :	23.000 MHz
LEVEL :	39
IPPV :	DISABLED
LAST POLL REQ :	170
6-15-2001 20:49:33	
LAST POLL ACK :	170
6-15-2001 20:49:33	

The STARVUE II Diagnostic fields are:

Field	Description
<b>Status</b>	Indicates the transmitter status with the following variables: <ul style="list-style-type: none"> <li>- Idle</li> <li>t Transmitting</li> </ul>
<b>Frequency</b>	The transmitting frequency.
<b>Level</b>	The approximate power value of the STARVUE II transmitter in dBmV. The difference between the power value on the diagnostic screen and the actual power of the STARVUE II module may be $\pm 5$ dBmV.
<b>IPPV</b>	Indicates the Interactive Pay-Per-View status with the following variables: <b>ENABLED</b> IPPV enabled <b>UNSENT – ##</b> The set-top contains unspent IPPV transactions. <i>The variable –## is the number of unspent transactions.</i> <b>DISABLED</b> IPPV disabled
<b>Last Poll Req.</b>	Indicates the sequence number of the last poll request received by the set-top. The time stamp of the last poll request is displayed under LAST POLL REQ: <ul style="list-style-type: none"> <li>▪ If the set-top has received no poll request, , the sequence number and time stamp fields display N/A.</li> <li>▪ If the set-top has received a poll request set-top but its system time has not yet been initialized, the time stamp field displays NOT AVAILABLE.</li> </ul>
<b>Last Poll Ack.</b>	Indicates the sequence number of the last poll acknowledge received by the set-top. The time stamp of the last poll acknowledge is displayed under LAST POLL ACK. <ul style="list-style-type: none"> <li>▪ If the set-top has received no poll acknowledge, the sequence number and time stamp fields display N/A.</li> <li>▪ If the set-top has received a poll acknowledge but its system time has not yet been initialized, the time stamp field displays NOT AVAILABLE.</li> </ul>

## Telephone Modem (STARFONE) Diagnostics

```

TELEPHONE MODEM

TYPE:                               STARFONE 14.4K

PARAMETERS                          : VALID
BAUD RATE                            : 300
DATA FRMT                            : 8, EVEN

PHONE NUMBERS

#1                                    : 3435556666
#2                                    : 3435556667

LAST POLL REQ                        : 170
6-15-2001 20:49:33

LAST POLL ACK                        : 170
6-15-2001 20:49:33

BUSY COUNT                           : 0
NO ANSWER COUNT                      : 0
LOST CARRIER COUNT                  : 0

CARRIER                             :

STATUS:
  HANGUP-NORMAL

```

The Telephone Modem fields are:

Field	Description
<b>Type</b>	Displays the modem type and speed.
<b>Parameters</b>	The telephone parameter status: NOT SET, VALID, or SET
<b>Baud rate</b>	Displays the modem baud rate (300)
<b>Data Frmt</b>	Displays the modem protocol.
<b>Phone Numbers</b>	Displays the numbers that the modem will dial.
<b>Last Poll Req</b>	Displays the sequence number of the last poll request received by the set-top. The time of the last poll request is displayed immediately below LAST POLL REQ. If the set-top received no poll request, the sequence number and time stamp fields display N/A. If a poll request has been received by the set-top but the system time of the set-top has not yet been initialized, the time stamp field displays "Not available."
<b>Last Poll Ack</b>	Displays the sequence number of the last poll acknowledge received by the set-top. The time stamp of the last poll acknowledge is displayed immediately below LAST POLL ACK. If the set-top received no poll acknowledge, the sequence number and time stamp fields display "N/A." If the set-top received a poll acknowledge but its system time is not yet initialized, the time stamp field displays NOT AVAILABLE.

Field	Description
<b>Busy Count</b>	Number of detected line busy errors during phone modem dialing
<b>No Answer Count</b>	Number of detected no answer errors during phone modem dialing
<b>Lost Carrier Count</b>	Number of detected carrier lost during modem transmission
<b>Carrier</b>	N/A

The following diagnostics display on the front-panel LED *only*:

- STARFONE transmitter status:

1 <sup>st</sup> Digit	2 <sup>nd</sup> Digit	Meaning
<b>h</b>	*	On hook (* = hang-up code)
<b>t</b>	-	Test for line available
<b>d</b>	-	Dialing
<b>A</b>	-	Waiting for answer
<b>c</b>	<b>R</b>	Communicating, receiving
<b>c</b>	<b>T</b>	Communicating, transmitting
<b>c</b>	-	Communicating, idle
<b>r</b>	*	Waiting for retry (* = hang-up code)

- Hang-up code

Code	Status
-	Normal hang-up
<b>A</b>	Answer time-out
<b>r</b>	Phone ringing
<b>c</b>	Carrier loss
<b>L</b>	Line in use
<b>E</b>	Errors (data)
<b>U</b>	User line request
<b>P</b>	Parameters invalid
<b>t</b>	Data timeout
<b>C</b>	Communication protocol fault

- IPPV status indicator

OSD	Mode
<b>ENABLED</b>	IPPV enabled
<b>UNSENT</b>	This set-top contains unsent IPPV transactions
<b>DISABLED</b>	IPPV disabled

## d 10: Application (APP) Code Modules

This diagnostic displays the downloaded code modules. This can be a multi-page display. Press **SELECT** to display additional pages. A sample OSD screen for a set-top containing ROM is:

APP CODE MODULES			
MODULE	VER	STATUS	ID
050-0109	1.09	ENABLED	0001
App1_____	02.00	DOWNLD	07DA

The APP Code Modules fields are:

Field	Description
<b>Module</b>	The object name
<b>Version</b>	The object version
<b>Status</b>	The <b>STATUS</b> modes available are: <ul style="list-style-type: none"> <li>▪ LOADING</li> <li>▪ DELETED</li> <li>▪ ENABLING</li> <li>▪ ENABLED</li> <li>▪ DSABLNG</li> <li>▪ DISABLD</li> <li>▪ DELETNG</li> <li>▪ POSTPND</li> <li>▪ ENNORUN</li> <li>▪ DISNORUN</li> </ul>
<b>ID</b>	The object AppID

## d 11: Memory Status

This diagnostic displays the memory status. The format depends on the installed memory types.

MEMORY STATUS		
EEPROM VER.NO.		00.00
	PLATFORM	APPLICATION
NVMEM	236k	20k
DRAM	8192K	8192K
CODE/DATA		
FLASH	1024K	1024K

The Memory Status fields are:

Field	Description
<b>EEPROM Ver. No.</b>	The EEPROM version (never used, should always be 00.00).
<b>Platform</b>	Indicates sizes of memory types allocated to platform code.
<b>Application</b>	Indicates sizes of memory types allocated to application code.

## d 12: Interactive Info

This diagnostic tool gathers data about your system:

INTERACTIVE INFO	
IP	: 0.0.0.0
UPM	: 0X000021
UPSTREAM ID	: 0X0000
DOWNSTREAM ID	: 0X0000
STATE	: UNCONFIG
MAC ABORT CNTR	: 0000
GOOD PACKETS:	
ERROR PACKETS:	
SOCKET PORT STATE	
0	UNUSED
1	UNUSED
2	UNUSED
3	UNUSED
4	UNUSED
5	UNUSED



The Interactive Info fields are:

Field	Description
<b>IP</b>	The set-top IP address assigned by the NC 1500, in dotted-decimal format; for example, xxx.xxx.xxx.xxx where each xxx ranges from 000 to 255.
<b>UPM</b>	The upstream modem address. This UPM value is the same as the terminal ID assigned by the DAC 6000. The UPM is a unique, system-generated, eight-digit integer between 1 and 16777215 displayed in hexadecimal format.
<b>Upstream ID</b>	The set-top transmission parameter assigned by the DAC 6000. It is a four-digit value ranging from 0000 to 9999 displayed in hexadecimal format.
<b>Downstream ID</b>	The set-top transmission parameter assigned by the DAC 6000. It is a four-digit decimal value ranging from 0000 to 9999 displayed in hexadecimal format.
<b>State</b>	The state mode can be MAC CONNECT, UNCONFIG, INIT_WAIT_DC_OR_, WAIT_LM_ACK, WAIT_SO_ACK, WAIT_LA_OR_SO, INIT_STOPPED, RUN_WAIT-DC-OR-C, RUNNING, RUN_STOPPED, or INVALID
<b>MAC Abort Cntr</b>	The MAC Abort Counter increments every time the MAC layer reaches the Cell Abort Count limit. The MAC Abort Counter is reset by the successful upstream transmission of a cell, for example, when an ACK is received by the set-top.
<b>Good Packets</b>	Not implemented.
<b>Error Packets</b>	Not implemented.
<b>Socket Port State</b>	The Socket Port State can be UNUSED, OPENED, READY, RECVING, or SENDING.

## d 13: MAC Frequency Table

The set-top uses a range of frequencies set by the host for upstream communications. The MAC Frequency Table displays your frequency and signal power:

MAC FREQUENCY TABLE	
FREQ	POWER

The MAC Frequency Table fields are:

Field	Description
<b>Frequency</b>	The frequency, in Hz, for an upstream channel.
<b>Power</b>	The power level, in dBmV, used on a particular upstream channel to send data to the RPD.

## d 14: Control Channels

This diagnostic lists channels, band types, PIDs, and counts.

Control Channel Info					
CHN	BAND	PID	Cnt	Ovfl	Err
0	INB	0000	1	0	0
1	INB	00A9	2198	0	0
.					
.					
8	OOB	0777	15207	1	0

## d 15: Message Types

This diagnostic lists message types, IDs, and counts:

MESSAGE TYPES (hex data)					
Msg	Id	Cnt	Msg	Id	Cnt
0	-	216	9A	E	0
1	2	89	A0	15	0

The Message Types fields are:

Field	Description
<b>Msg</b>	The message type.
<b>Id</b>	The low order byte of the Connection ID.
<b>Cnt</b>	The number of messages received.

## d 16: In-band Program Association Table (PAT)

This diagnostic displays the Program Association Table Information. (For Motorola use only.)

IN BAND PAT (hex data)		
PAT	SN	PID
001	0001	0029

## d 17: In-band Program Map Table (PMT)

This diagnostic displays the Program Map Table information. (For Motorola use only.)

IN BAND PMT (hex data)		
PMT	TYPE	PID
001	0080	0210

## d 18: Task Status

This diagnostic lists tasks. (For Motorola use only.)

TASK STATUS (hex data)					
TID	RID	PRI	STARTS	RUNTIME	STK%
64	00	2	21553	47441	26
63					
...					
0					

## d 19: USB Diagnostics

This diagnostic is used to verify the functionality of the USB port. (For Motorola use only)

USB DIAGNOSTICS		
Wind River Systems		
OHCI	Root	Hub

## d 20: In-band Multicast Address Filter

This diagnostic displays in-band multicast filter information:

IN BAND MULTICAST ADDRESS FILTER							
Filter Table:							
	DMCA	MCA	PQ	RQ	APP	CID	
NA	0000	0000	-01	-01	0000	0000	0000
NA	0000	0000	-01	-01	0000	0000	0000
NA	0000	0000	-01	-01	0000	0000	0000
NA	0000	0000	-01	-01	0000	0000	0000
REGISTER VALUES:							
	MCA	PID					
	0000	0000					
	0000	0000					
	0000	0000					
	0000	0000					

The In-band Multicast Address Filter fields are:

Field	Description
<b>Filter Table</b>	
<b>DMCA</b>	The default multicast 16 address.
<b>MCA</b>	The current multicast 16 address.
<b>PQ</b>	The preemption notification queue ID.
<b>RQ</b>	The response queue ID.
<b>APP</b>	The application ID.
<b>CID</b>	The connection ID.
<b>Register Values</b>	
<b>MCA</b>	Multicast 16 filter register contents.
<b>PID</b>	PID filter register contents.

## d 21: Keyboard / LED Diagnostics

You can use this diagnostic to verify that the buttons on the set-top front panel are operational. For example, the “<” on the diagnostic should highlight when you press the left CURSOR button on the front panel.

KEYBOARD / LED DIAGNOSTICS											
G	<	>	V	^	Î	M	S	B	-	+	P

## Abbreviations and Acronyms

---

<b>CSR</b>	Customer Service Representative
<b>DCT2500</b>	Digital Consumer Terminal 2500
<b>EMM</b>	entitlement management message(s)
<b>EPG</b>	electronic program guide
<b>HRC</b>	harmonically related carriers
<b>IPPV</b>	Impulse Pay-Per-View
<b>IR Blaster</b>	Infrared Blaster
<b>IRC</b>	incrementally related carriers
<b>MPAA</b>	Motion Picture Advisory Association
<b>NVOD</b>	Near Video on Demand
<b>NVRAM</b>	Non-volatile random-access memory
<b>OSD</b>	on-screen display
<b>PCR</b>	program clock reference
<b>PID</b>	packet identifier
<b>PPV</b>	Pay-Per-View
<b>QAM</b>	quadrature amplitude modulation
<b>QPSK</b>	quadrature phase shift keying
<b>RSA</b>	Return for Service Authorization
<b>TCP/IP</b>	Transmission Control Protocol/Internet Protocol
<b>TRC</b>	Technical Response Center
<b>TvPC</b>	TV PassCard
<b>VOD</b>	Video on Demand

Visit our website at:  
[www.motorola.com](http://www.motorola.com)



504989-001  
8/03

MGBI